


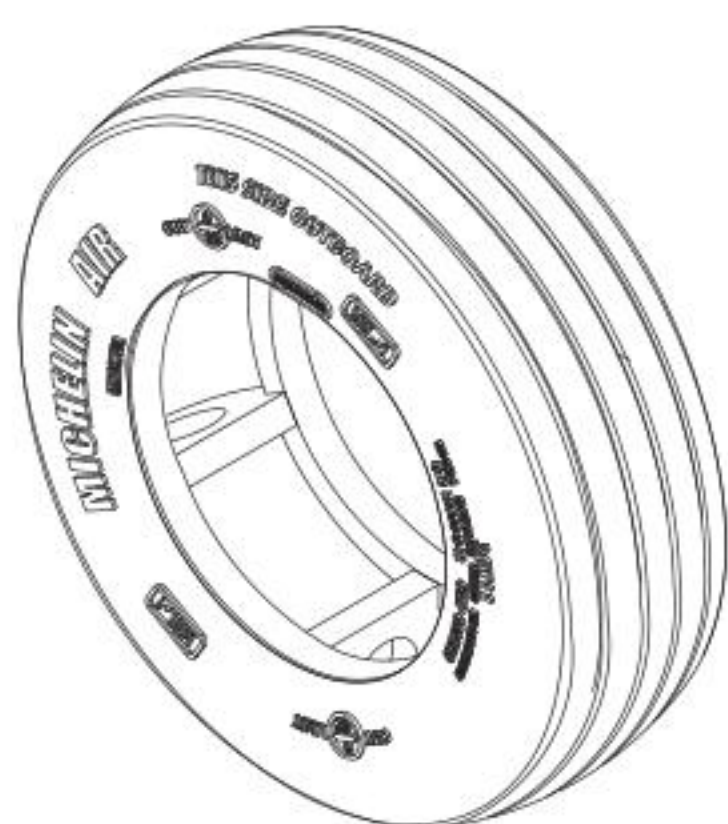


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**



R1 X2

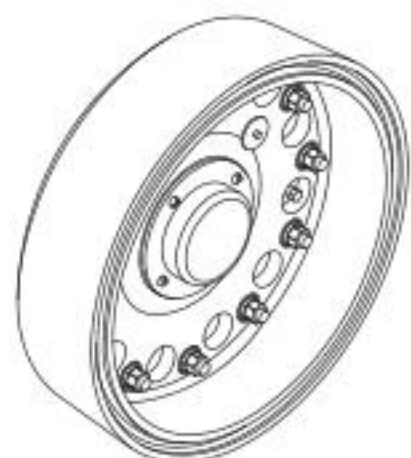

R3 X2




R17



R18



R20

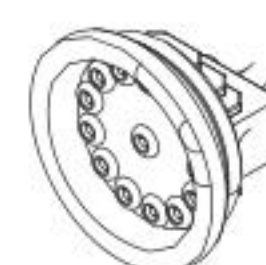

R19




R22




R21




R23

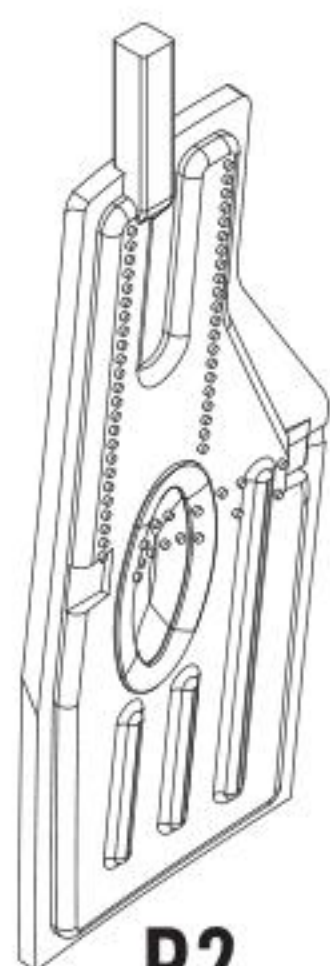


R2

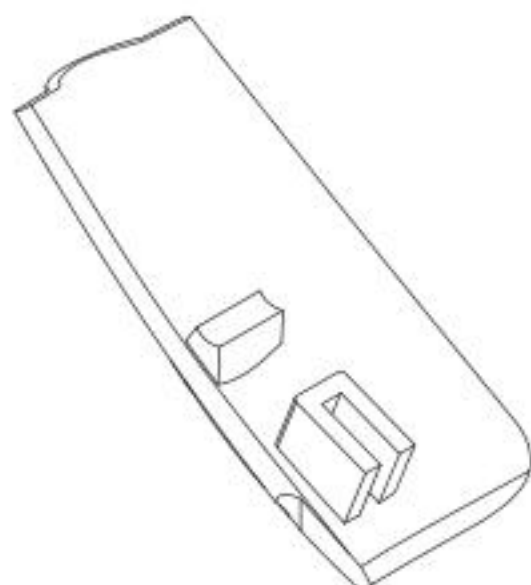


R4

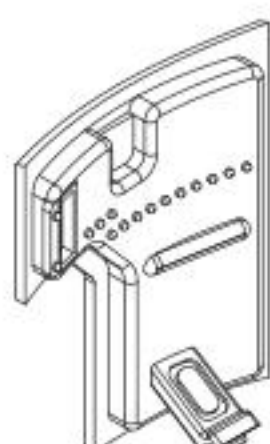


R5

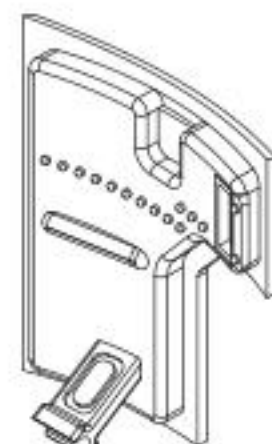


R15

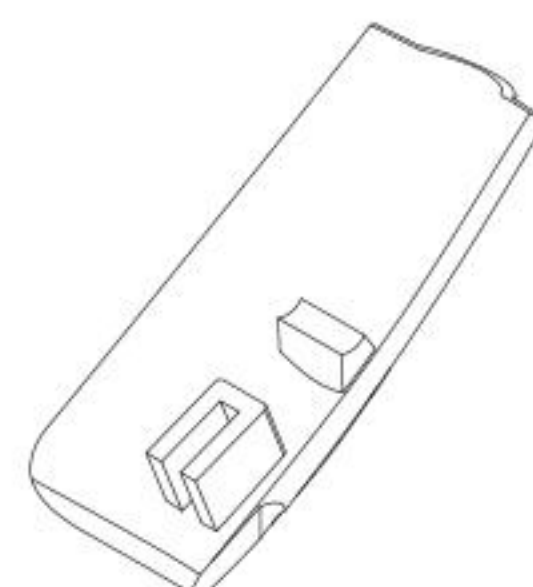

R14

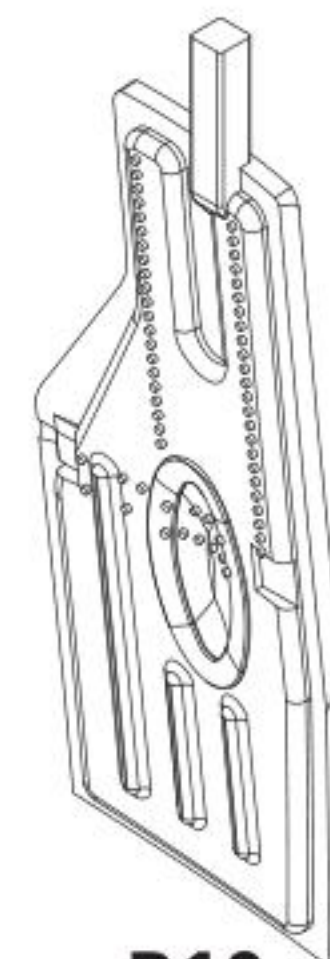

R13

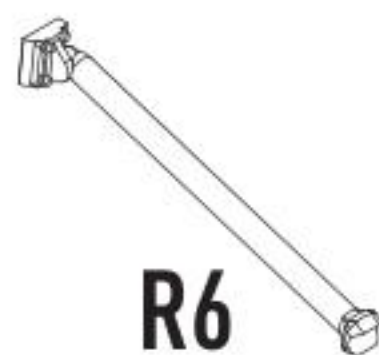


R6




R7




F1 X2

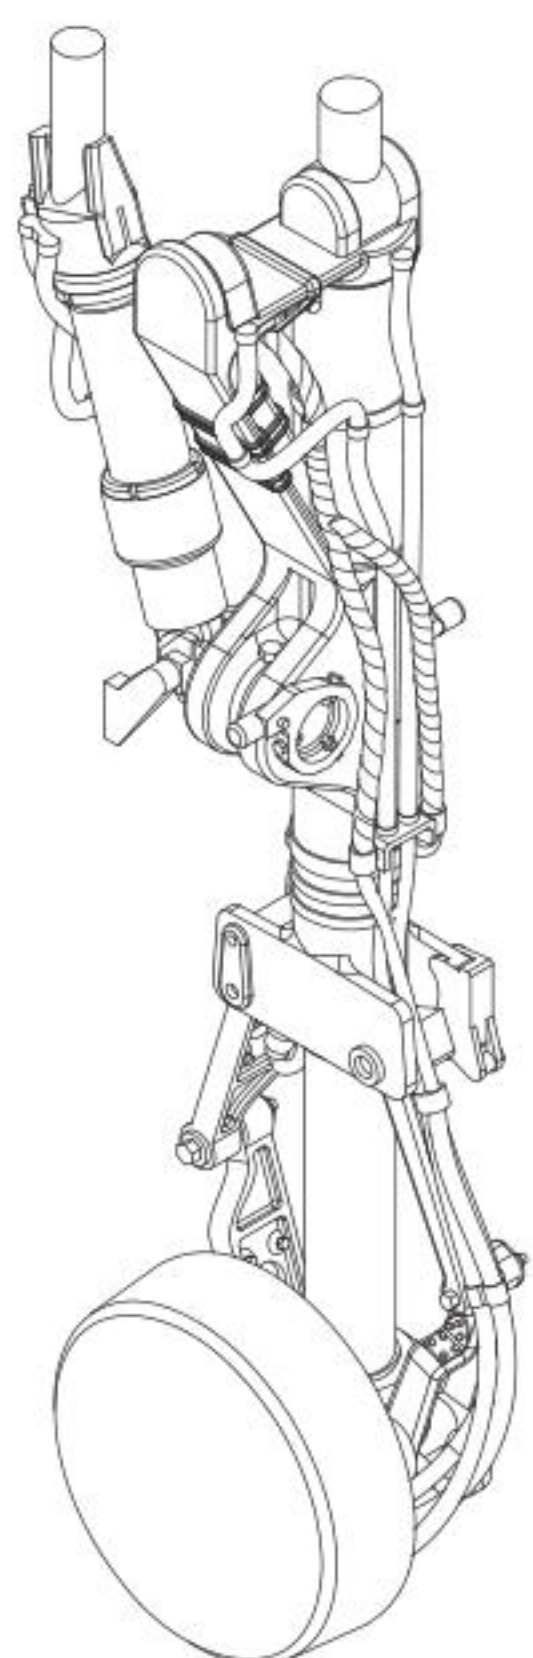


R8

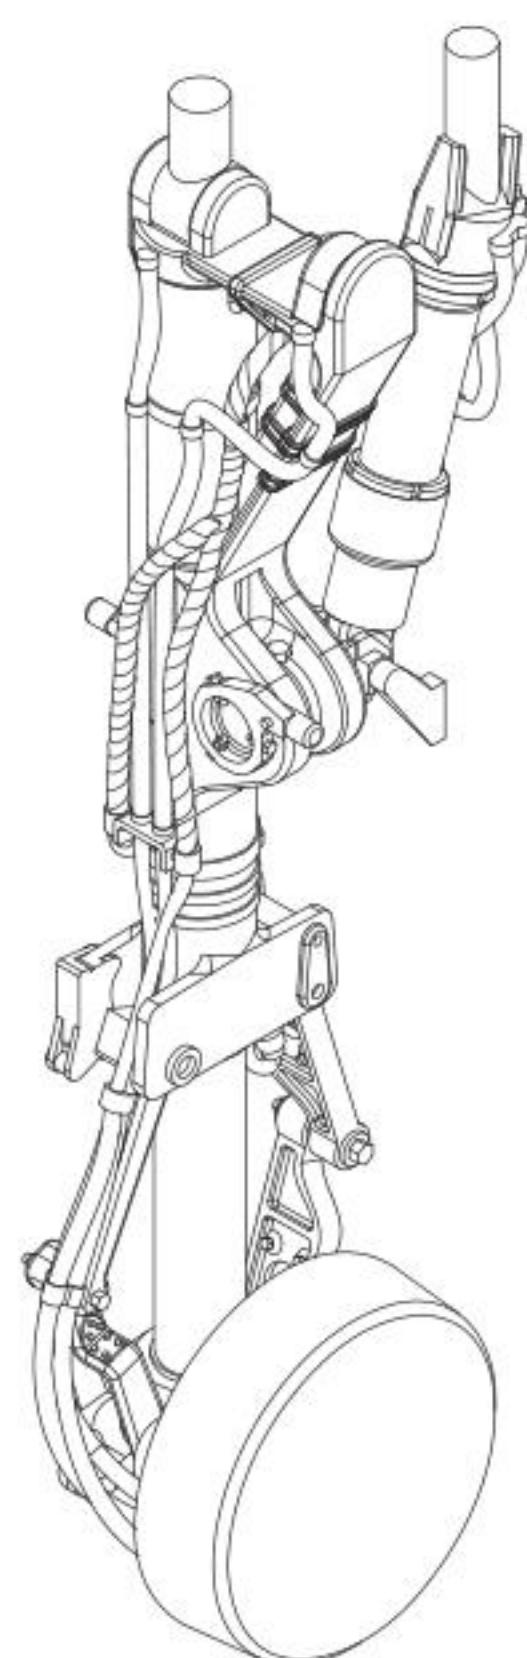

R9

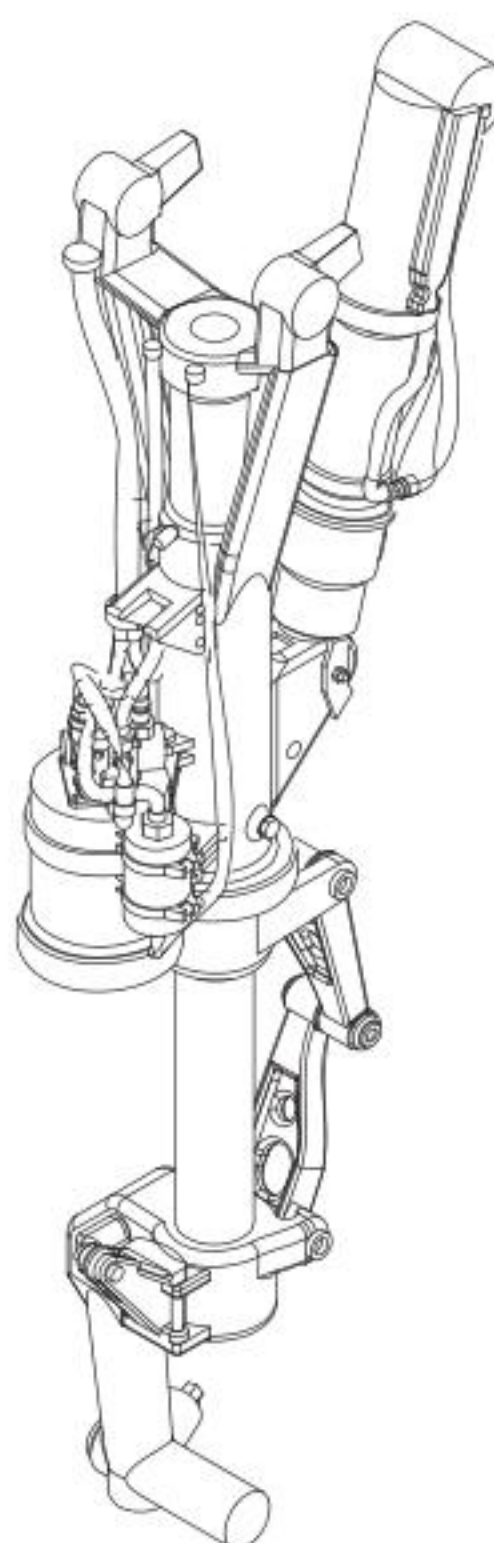

R10

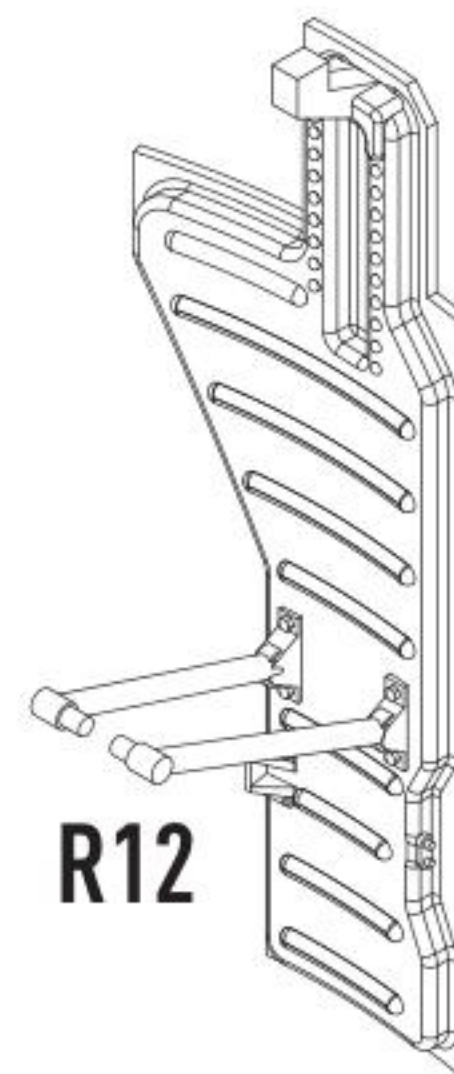

R12




R11






R16

1

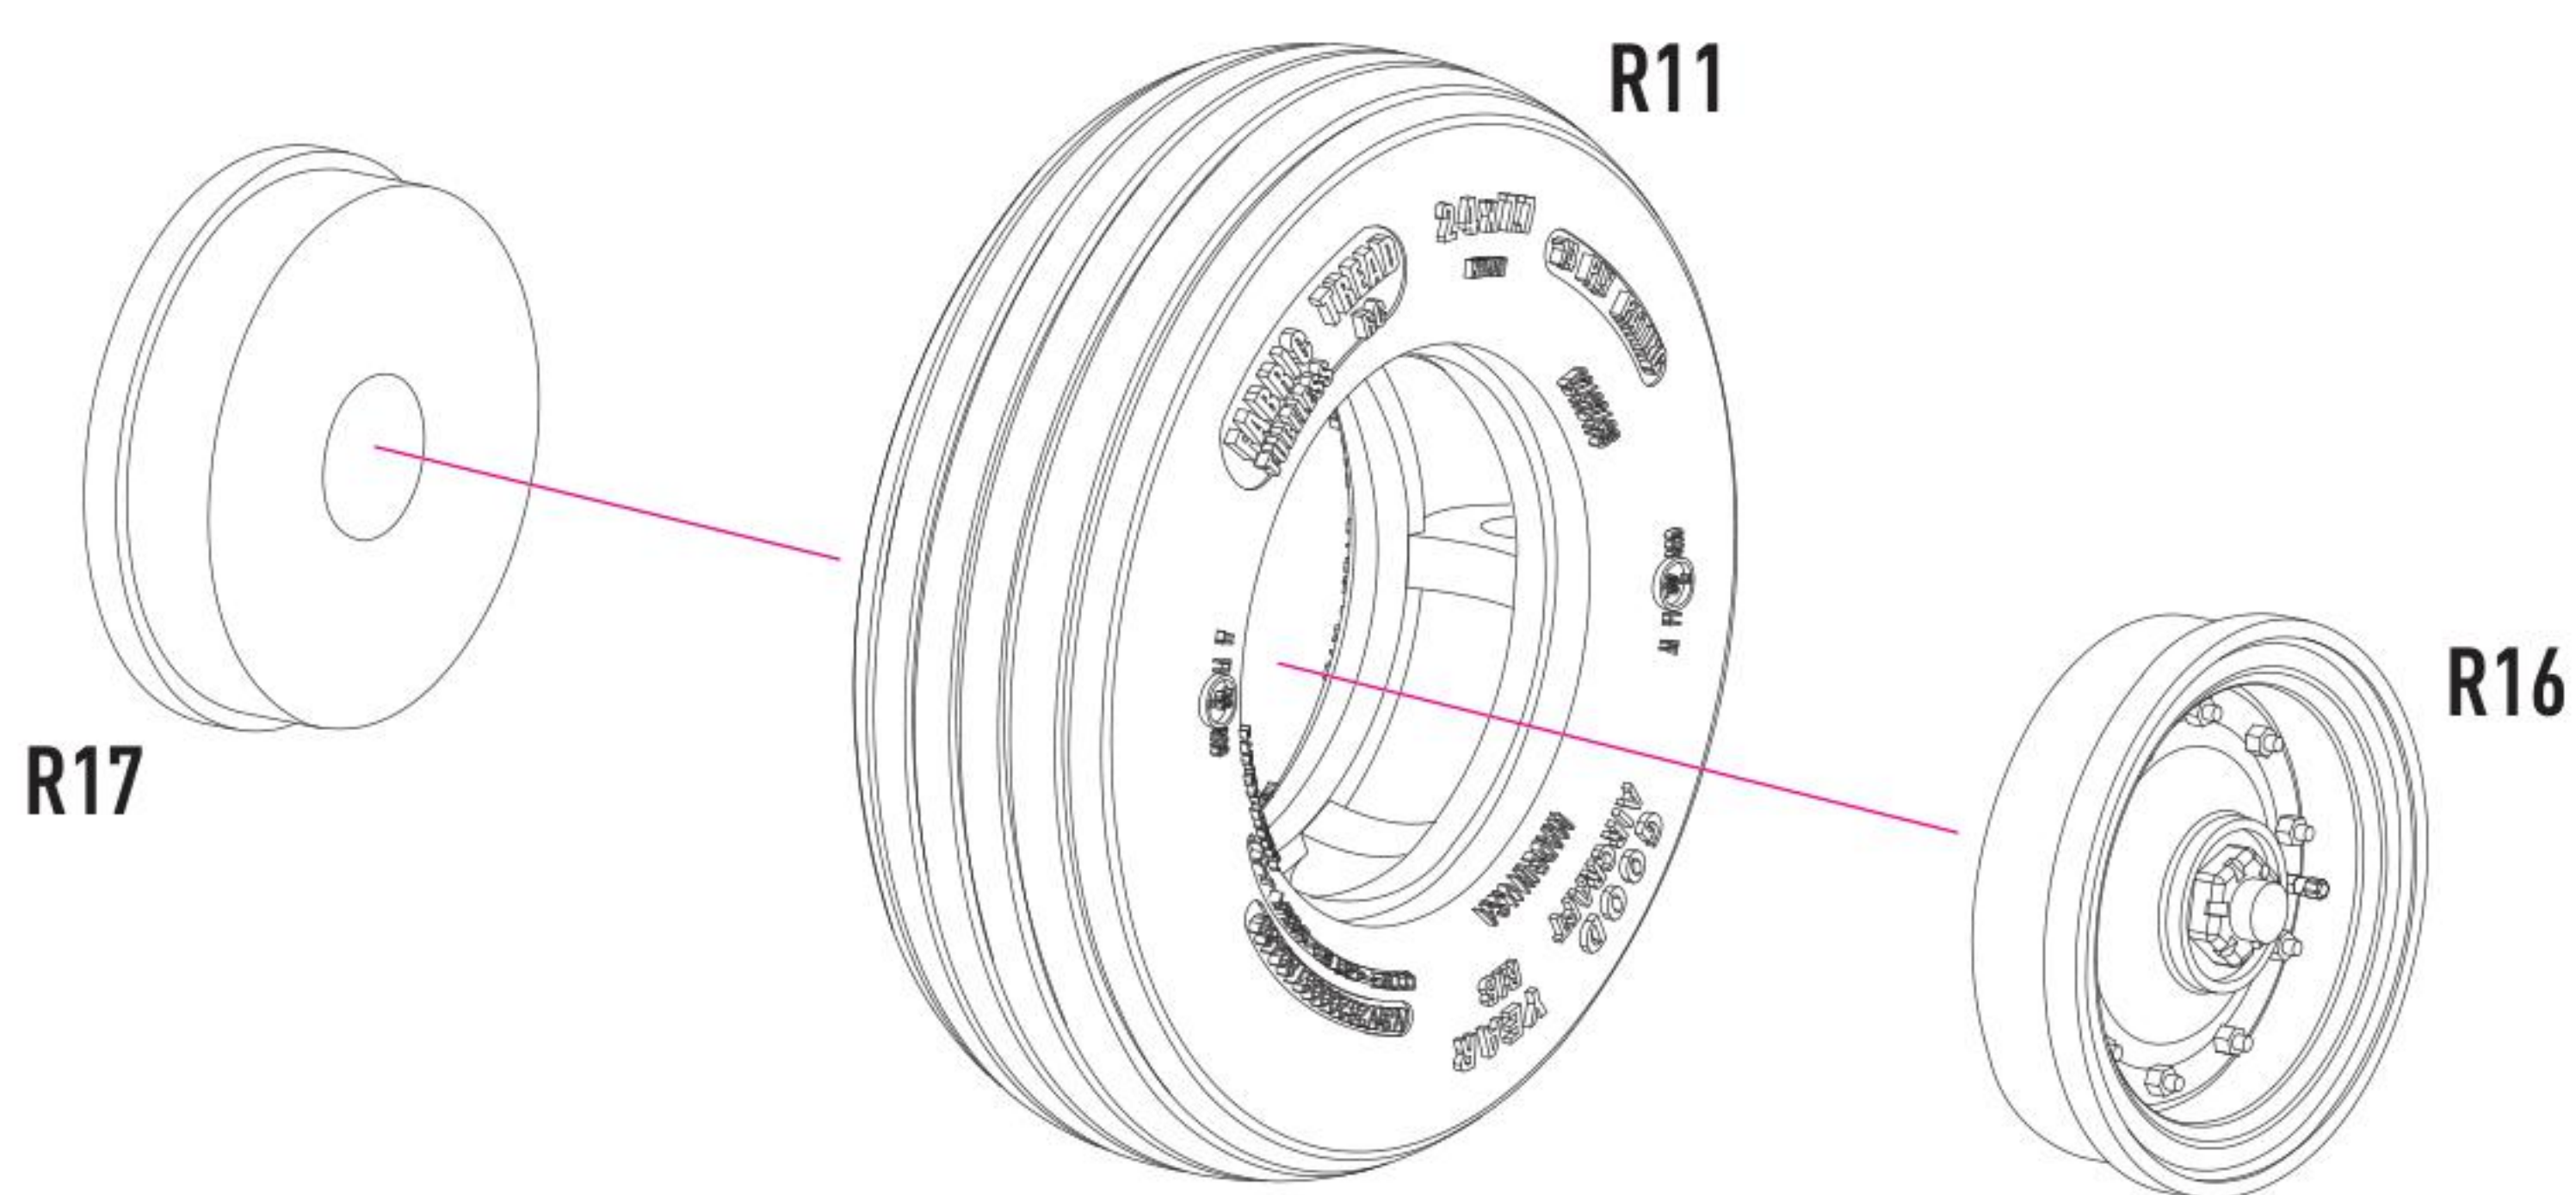

2

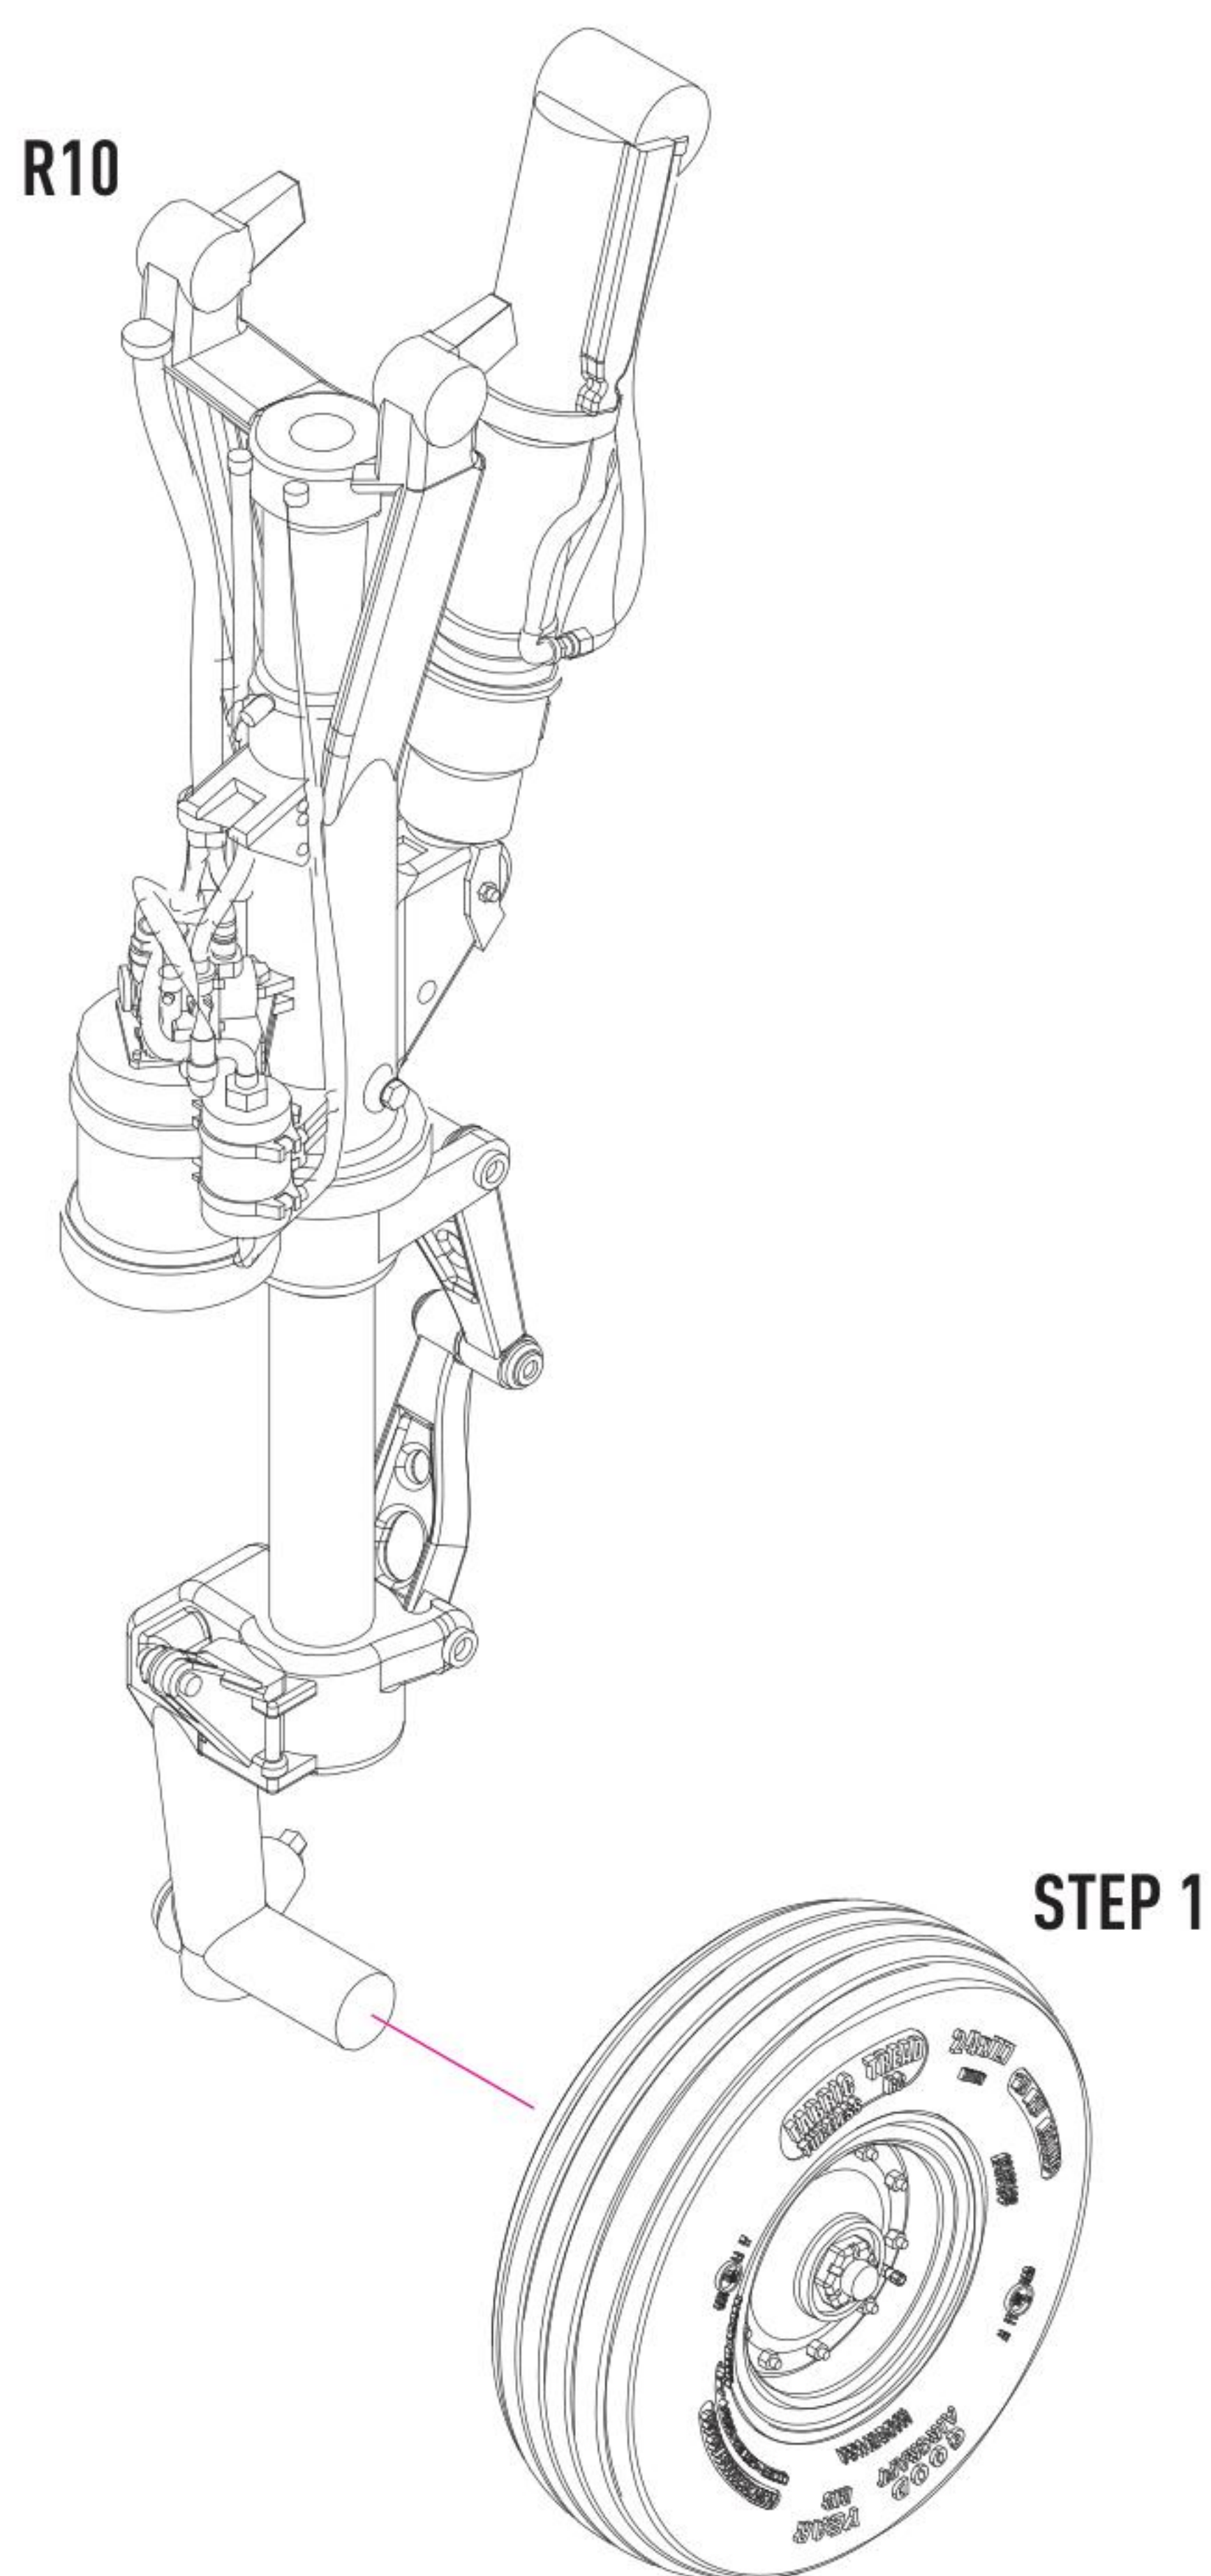

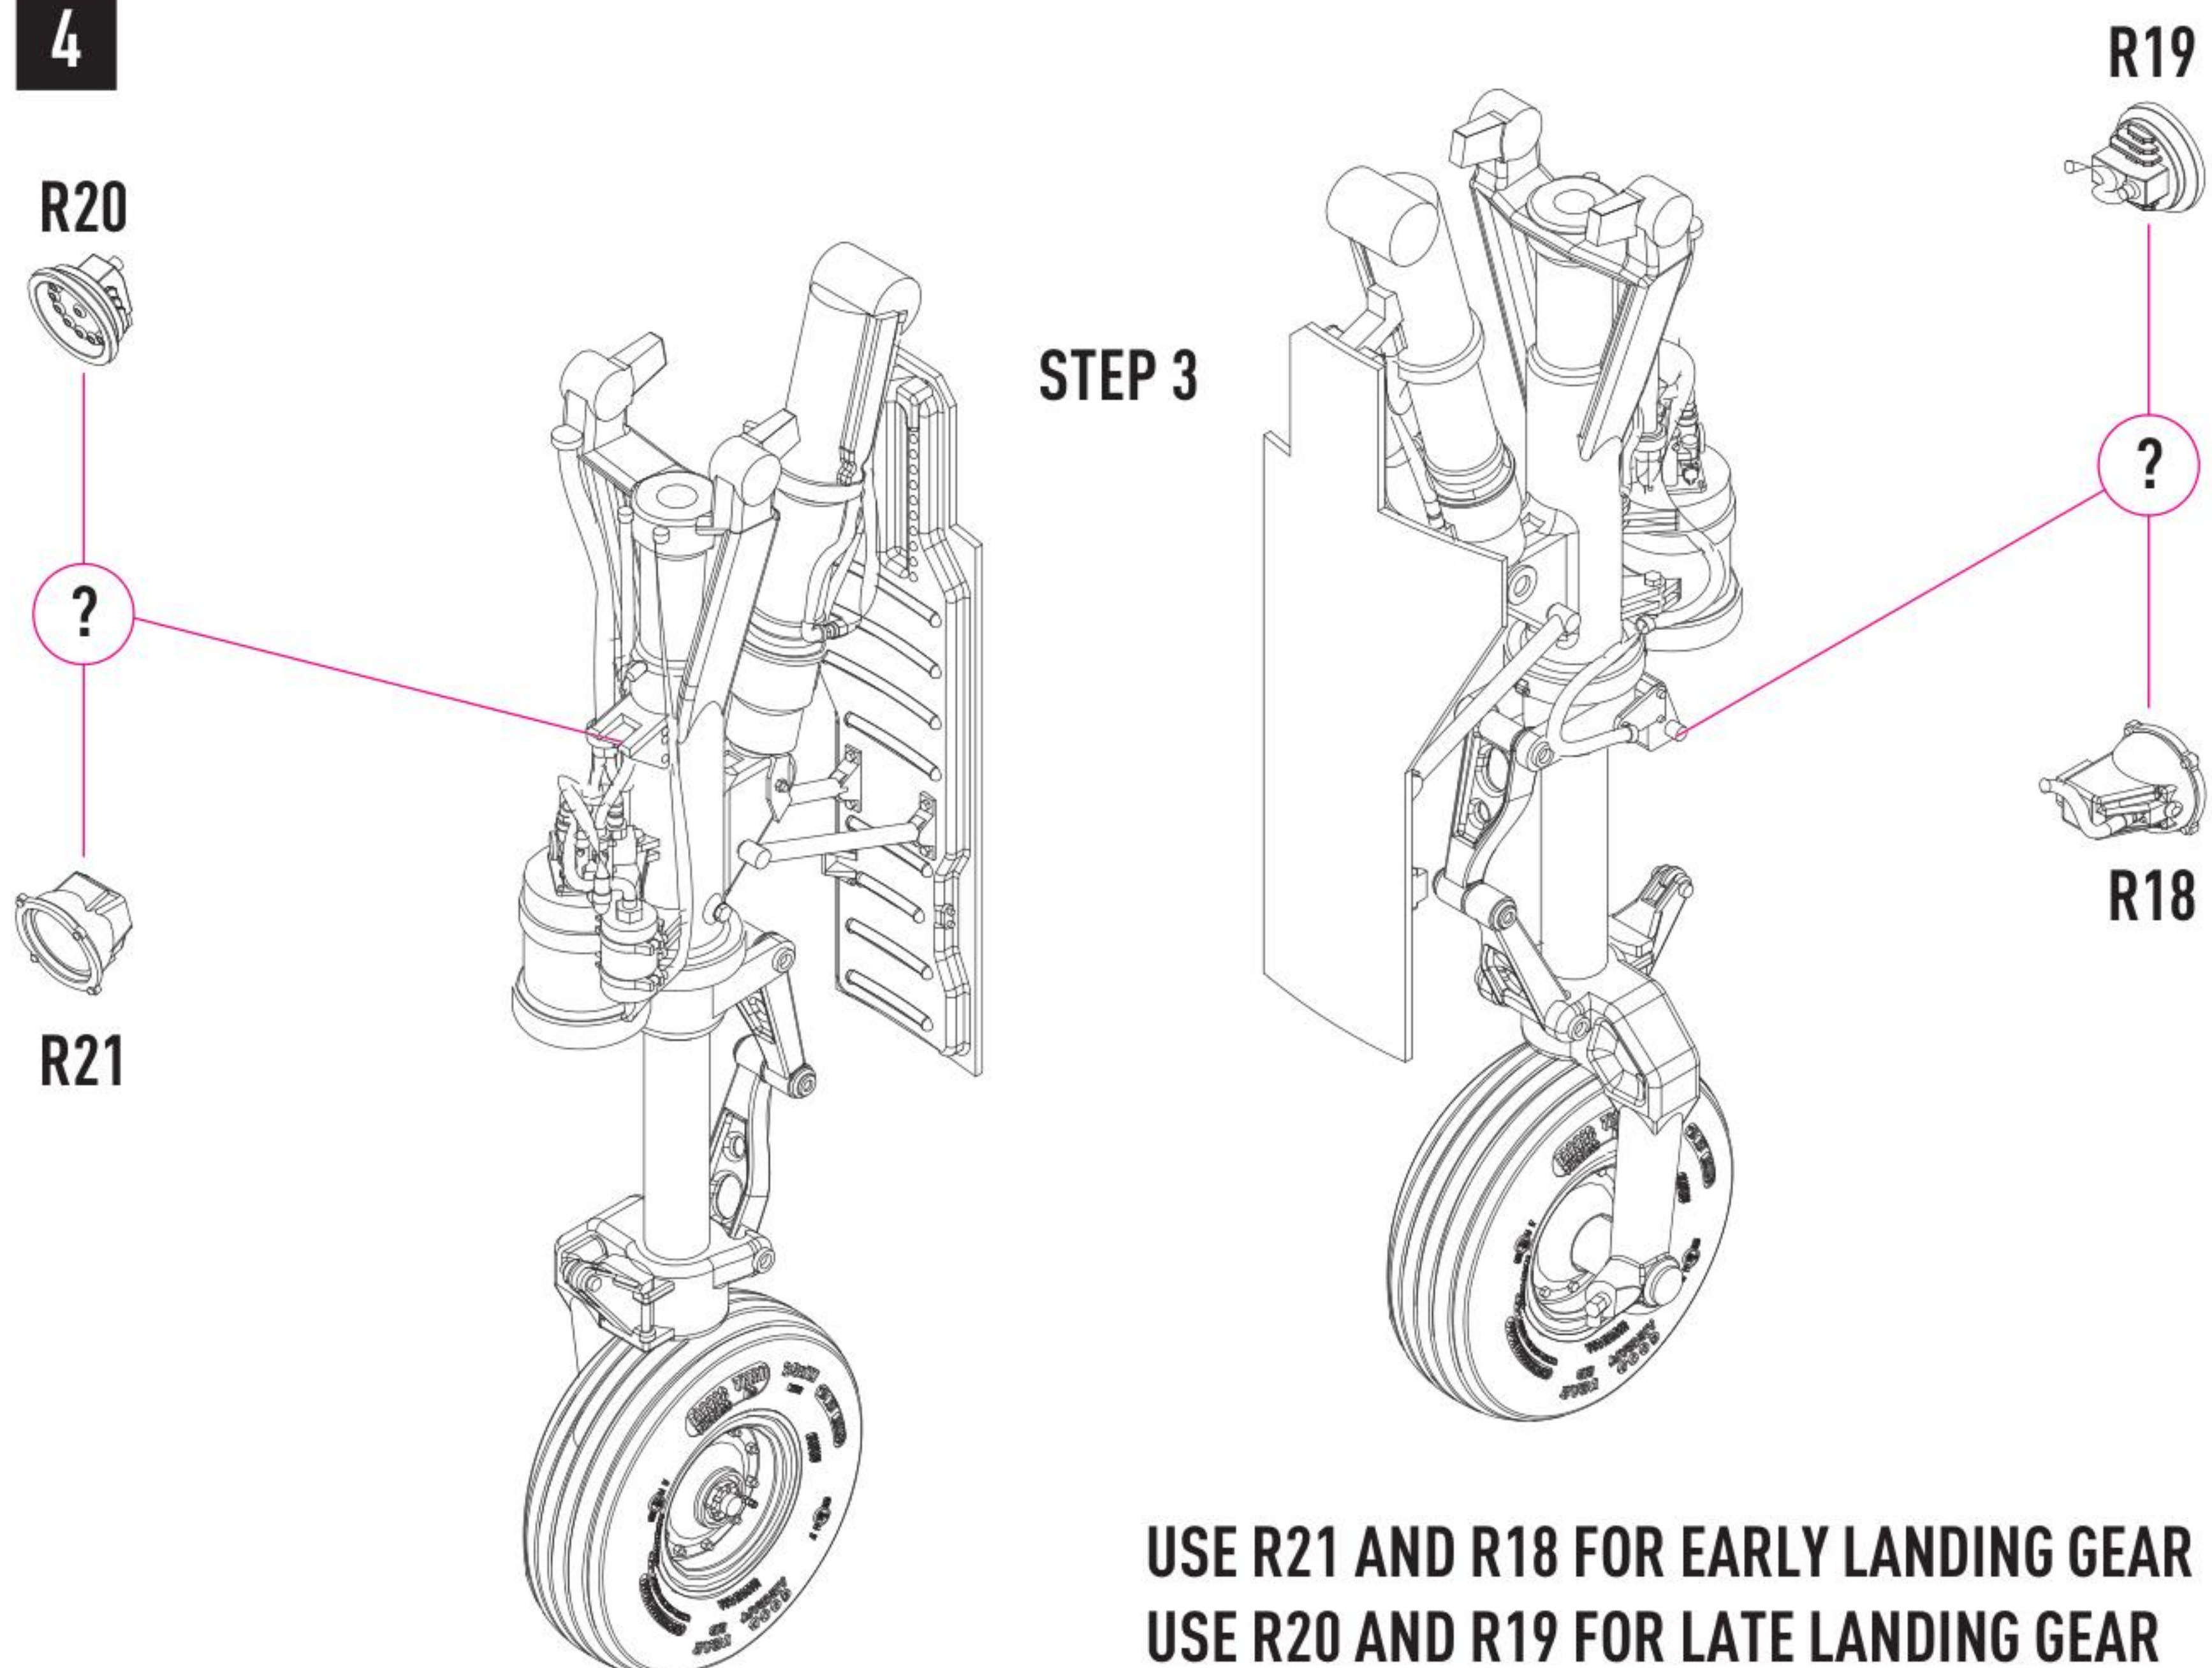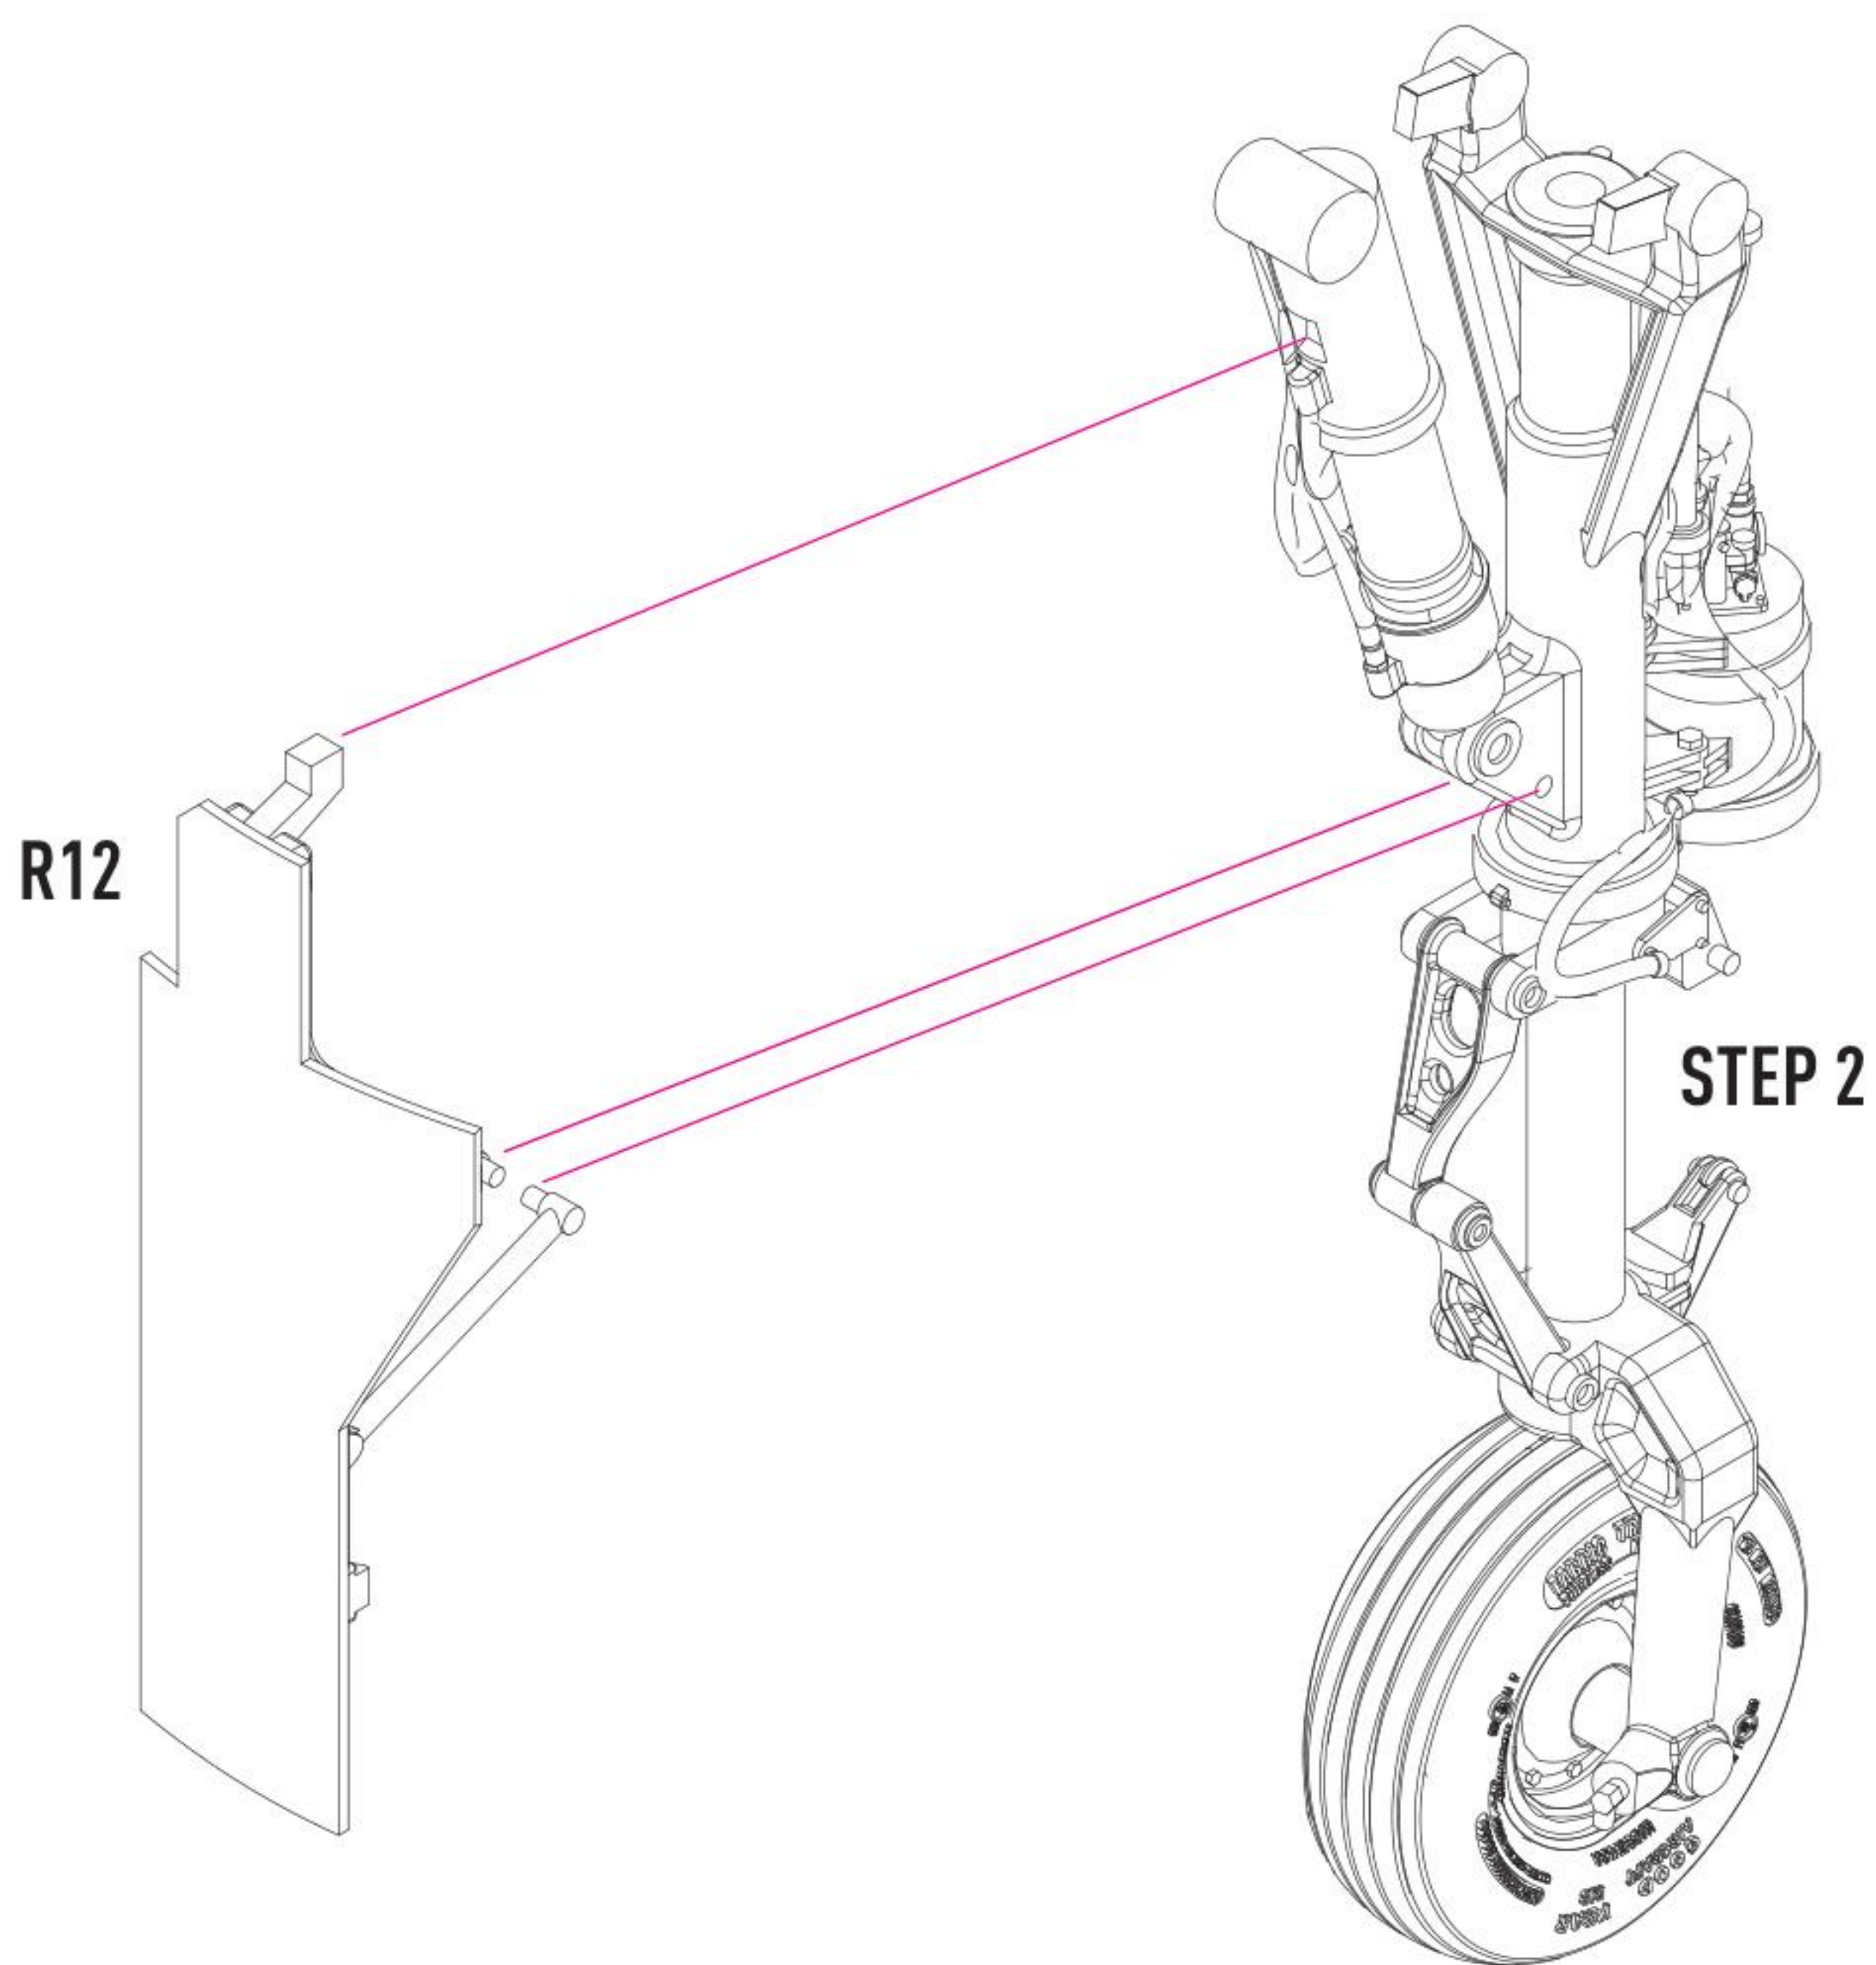

**USE R21 AND R18 FOR EARLY LANDING GEAR
USE R20 AND R19 FOR LATE LANDING GEAR**



5

STEP 4

F1



F1

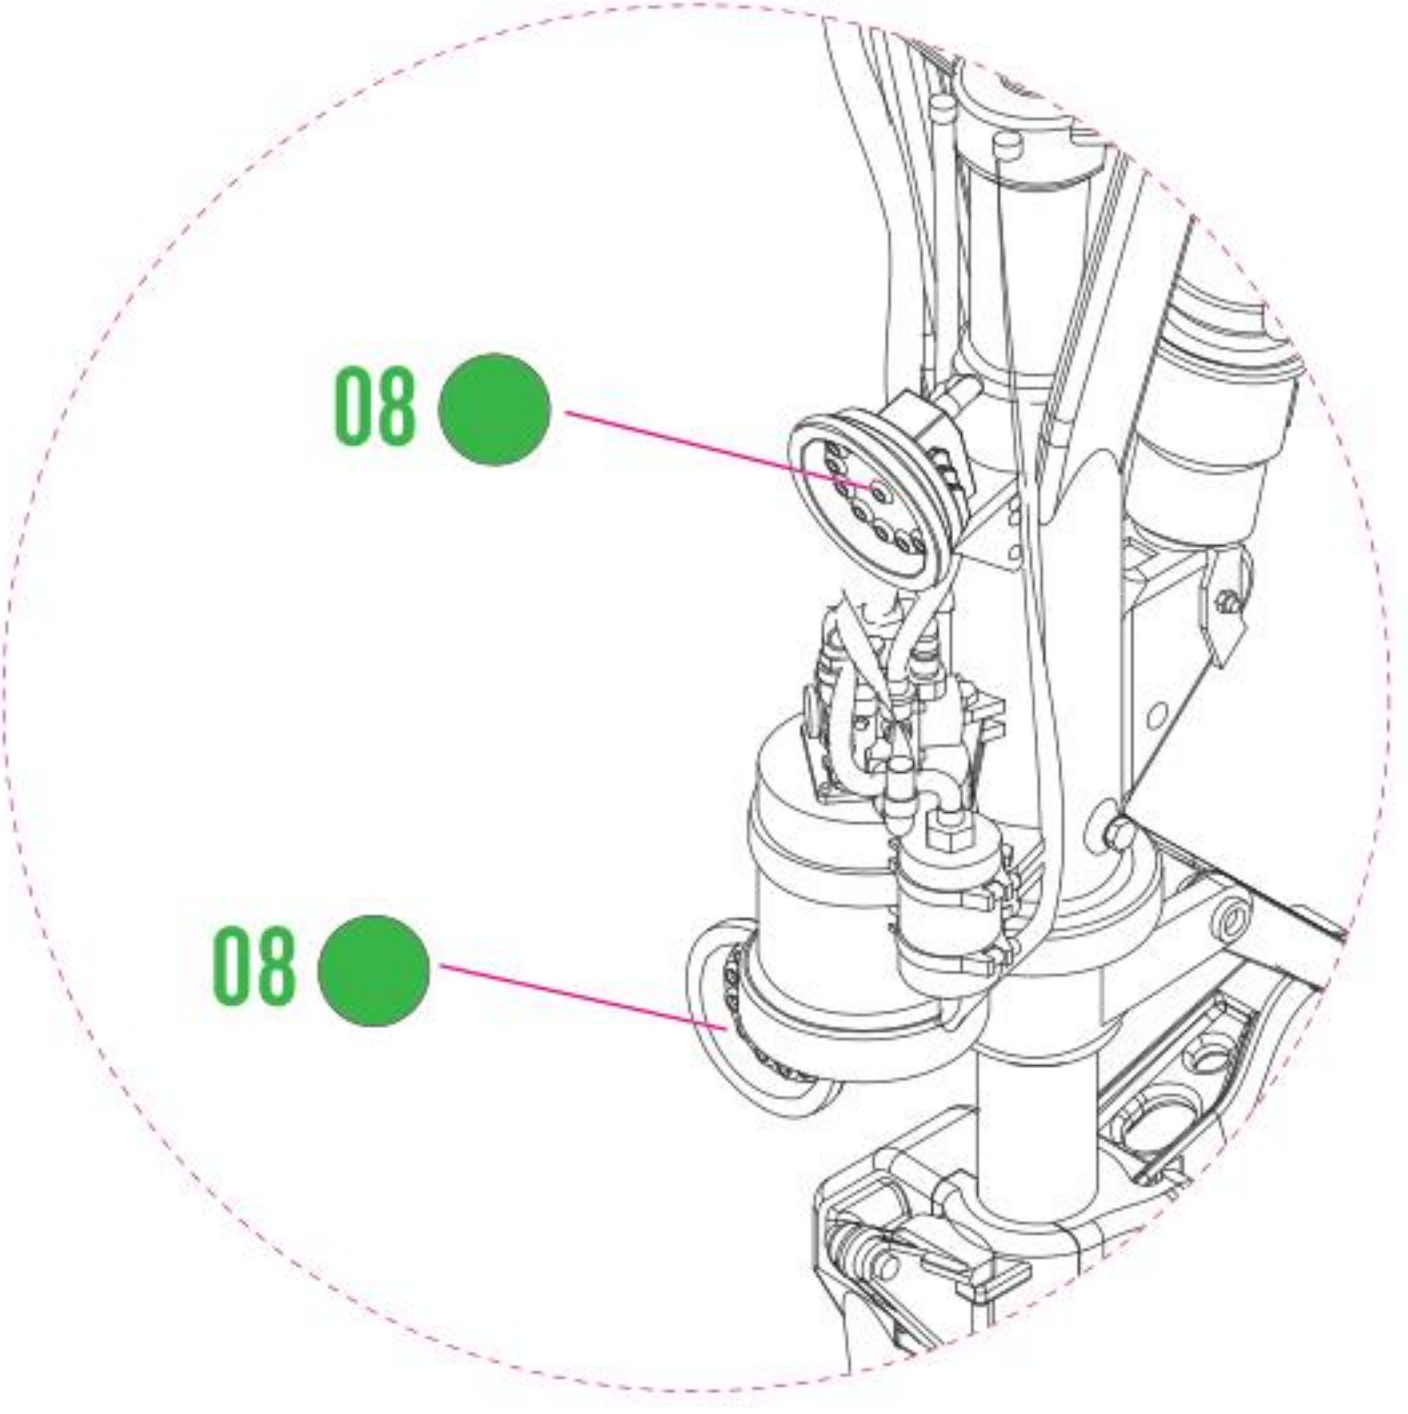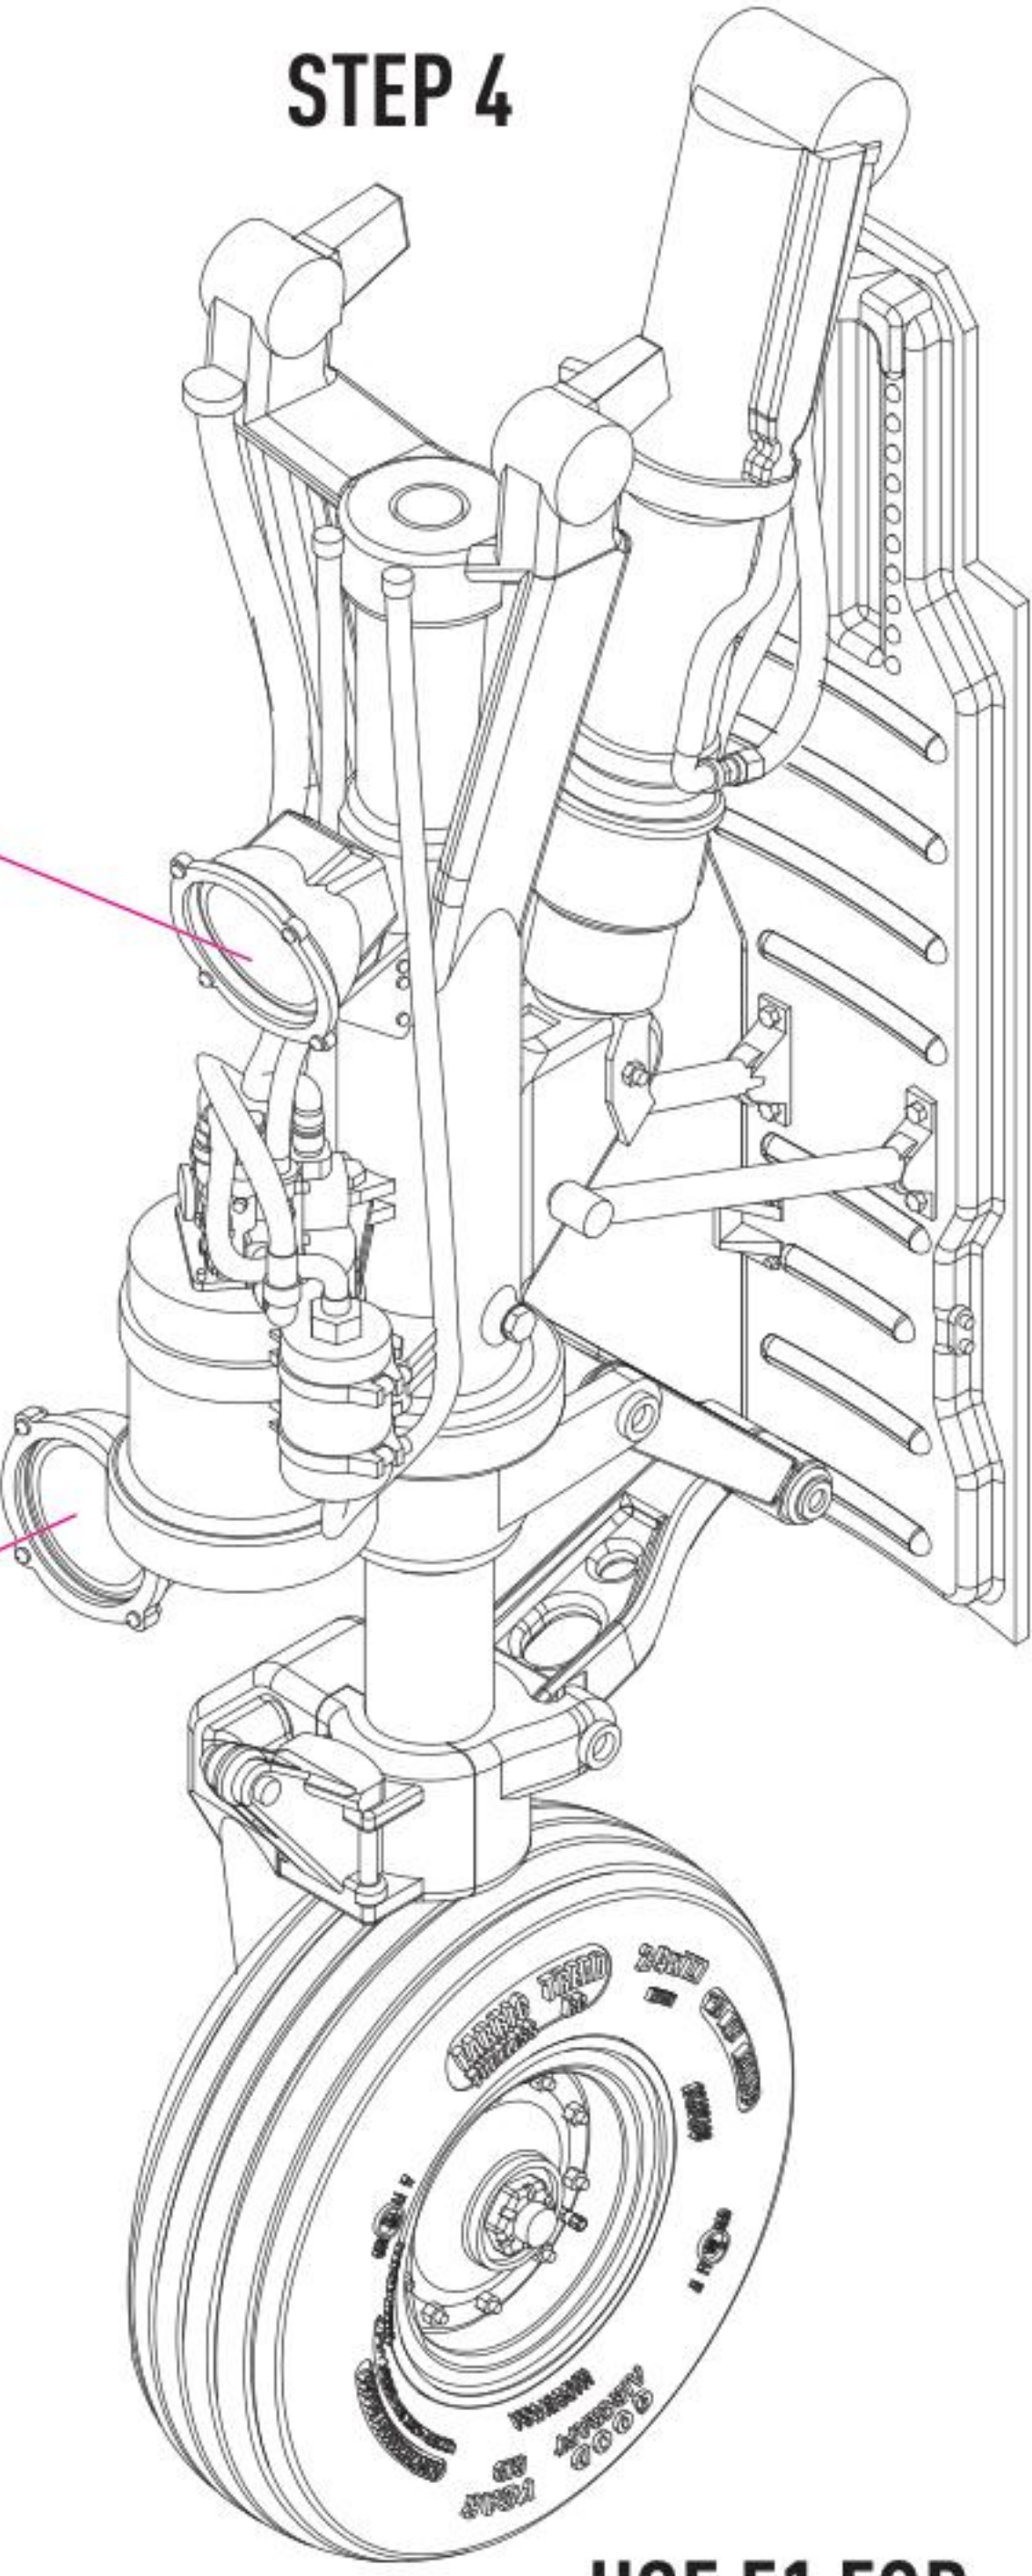

08


08

USE DECAL 08 FOR
LATE LANDING GEAR


USE F1 FOR
EARLY LANDING GEAR

6

X2


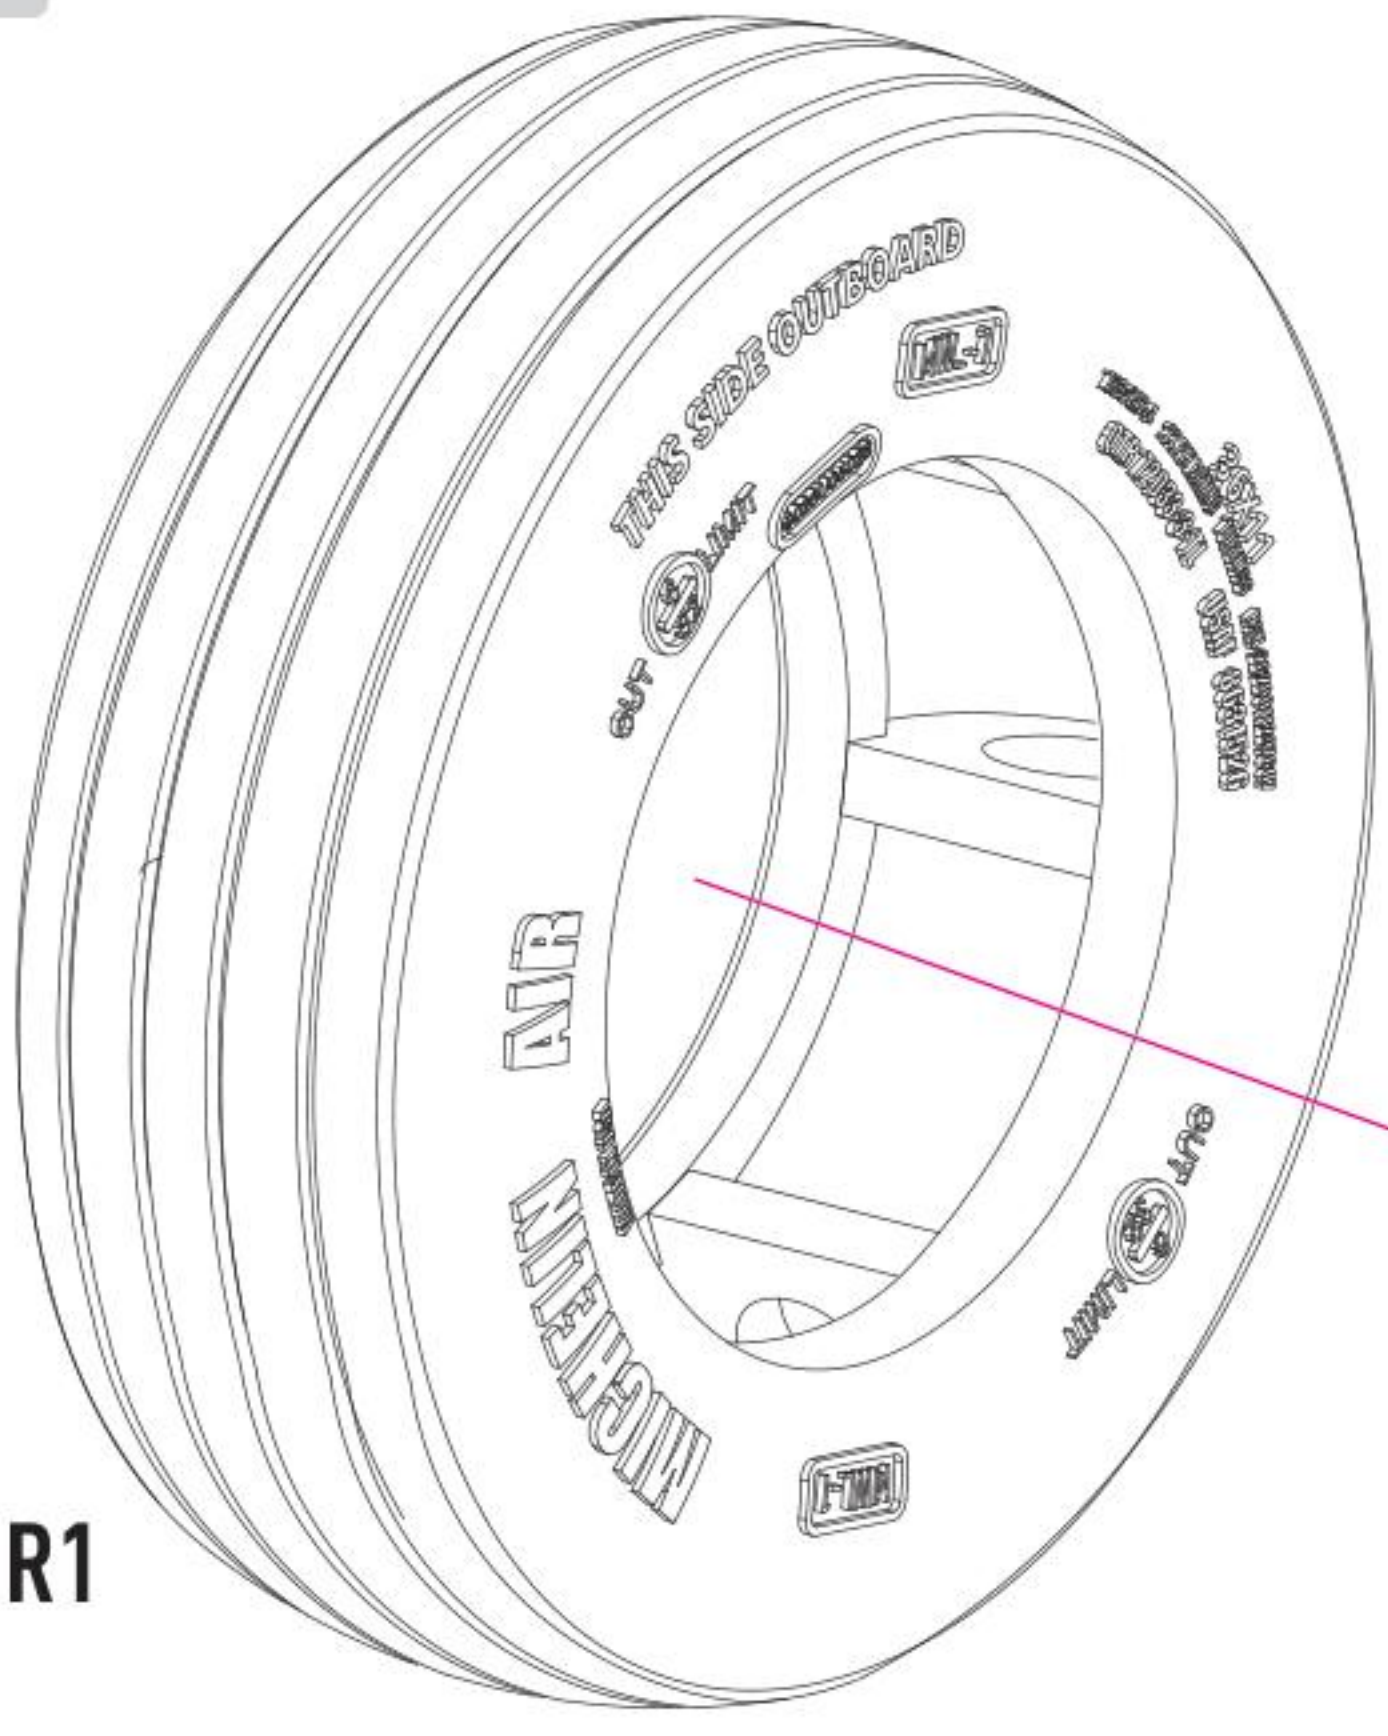


R1


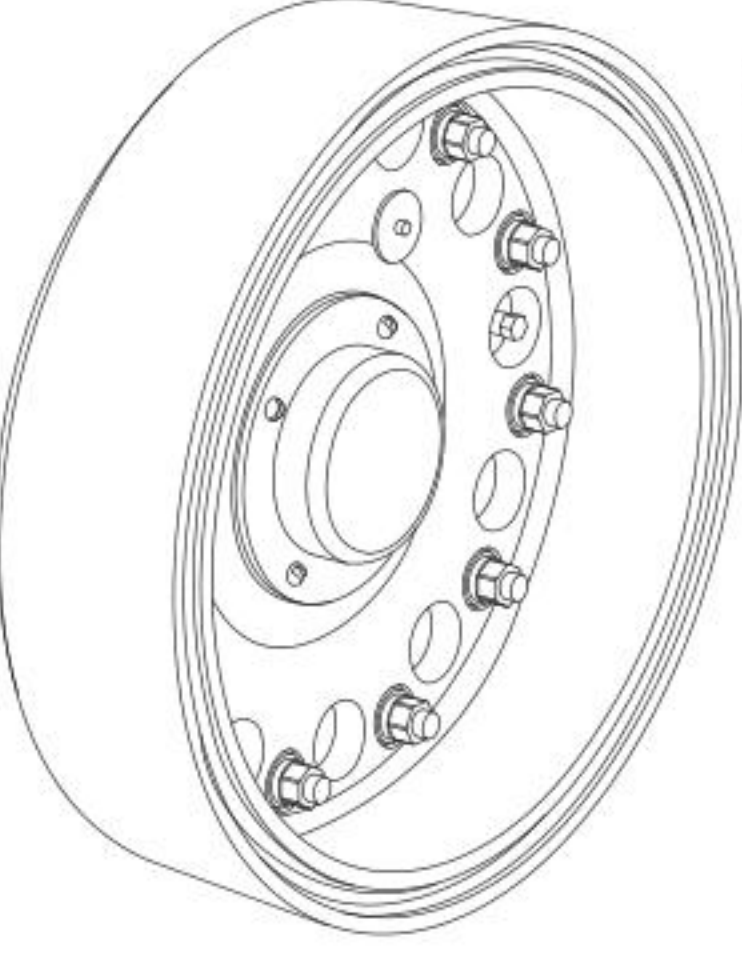


R3


7

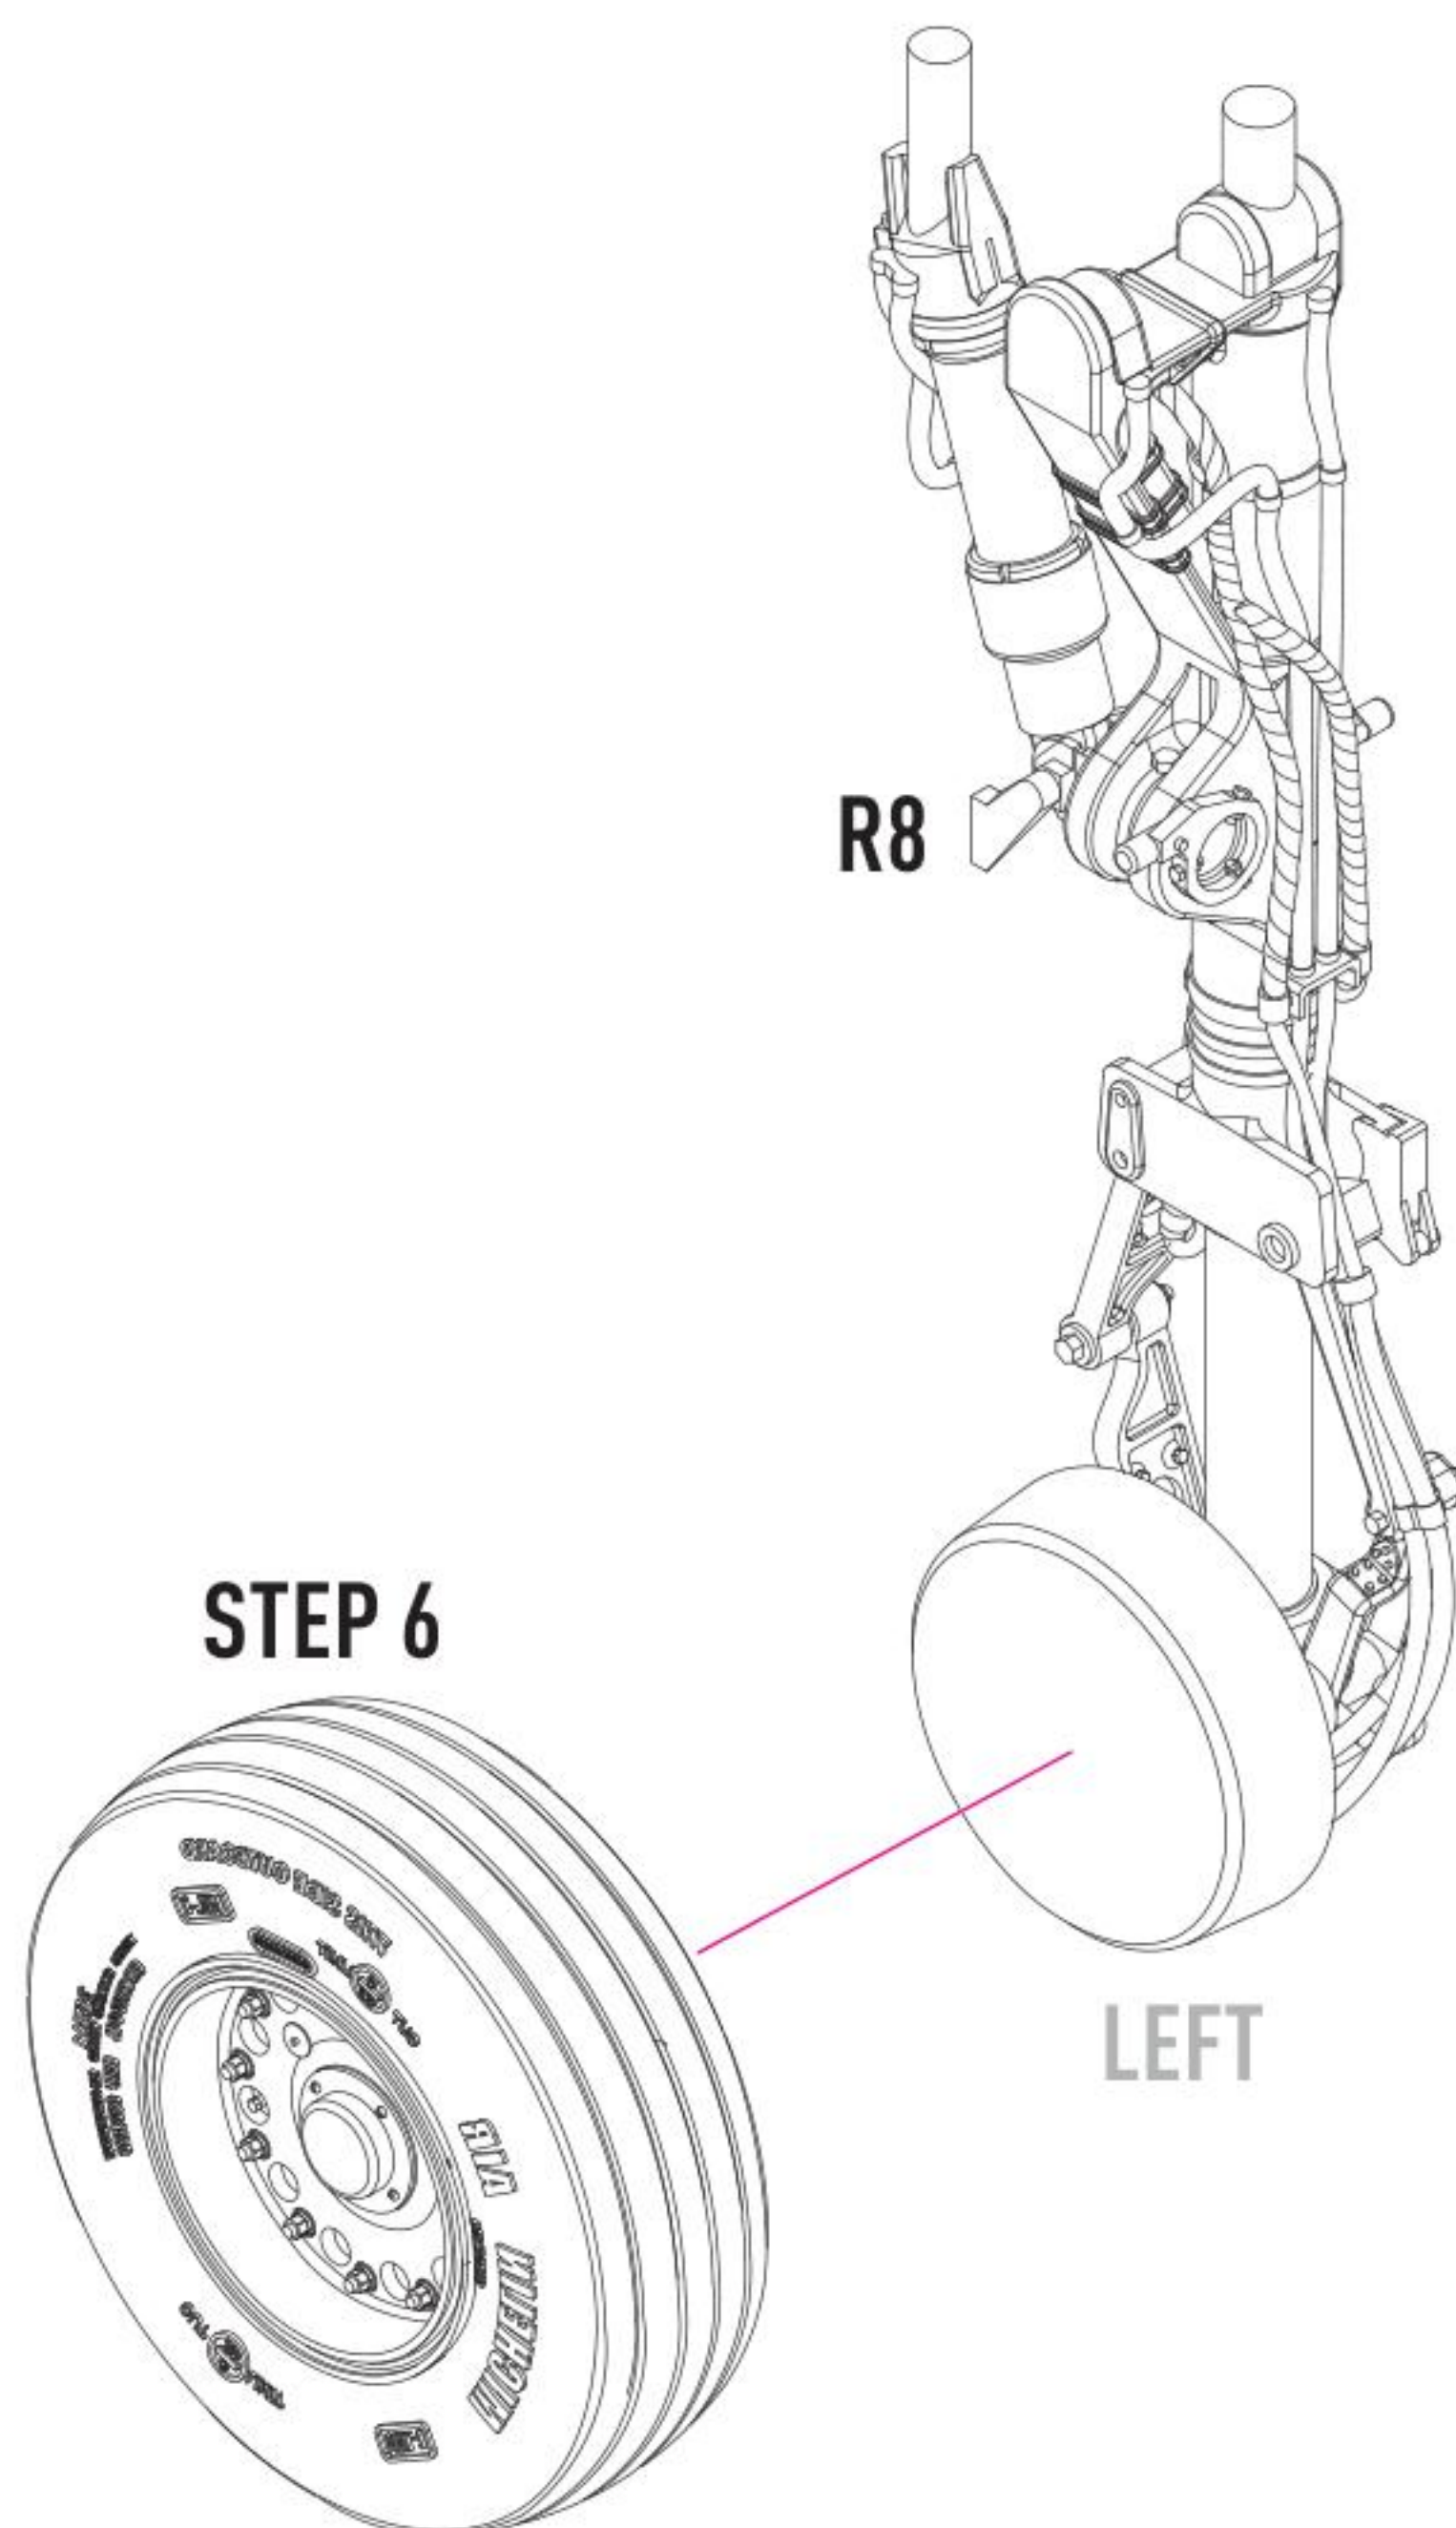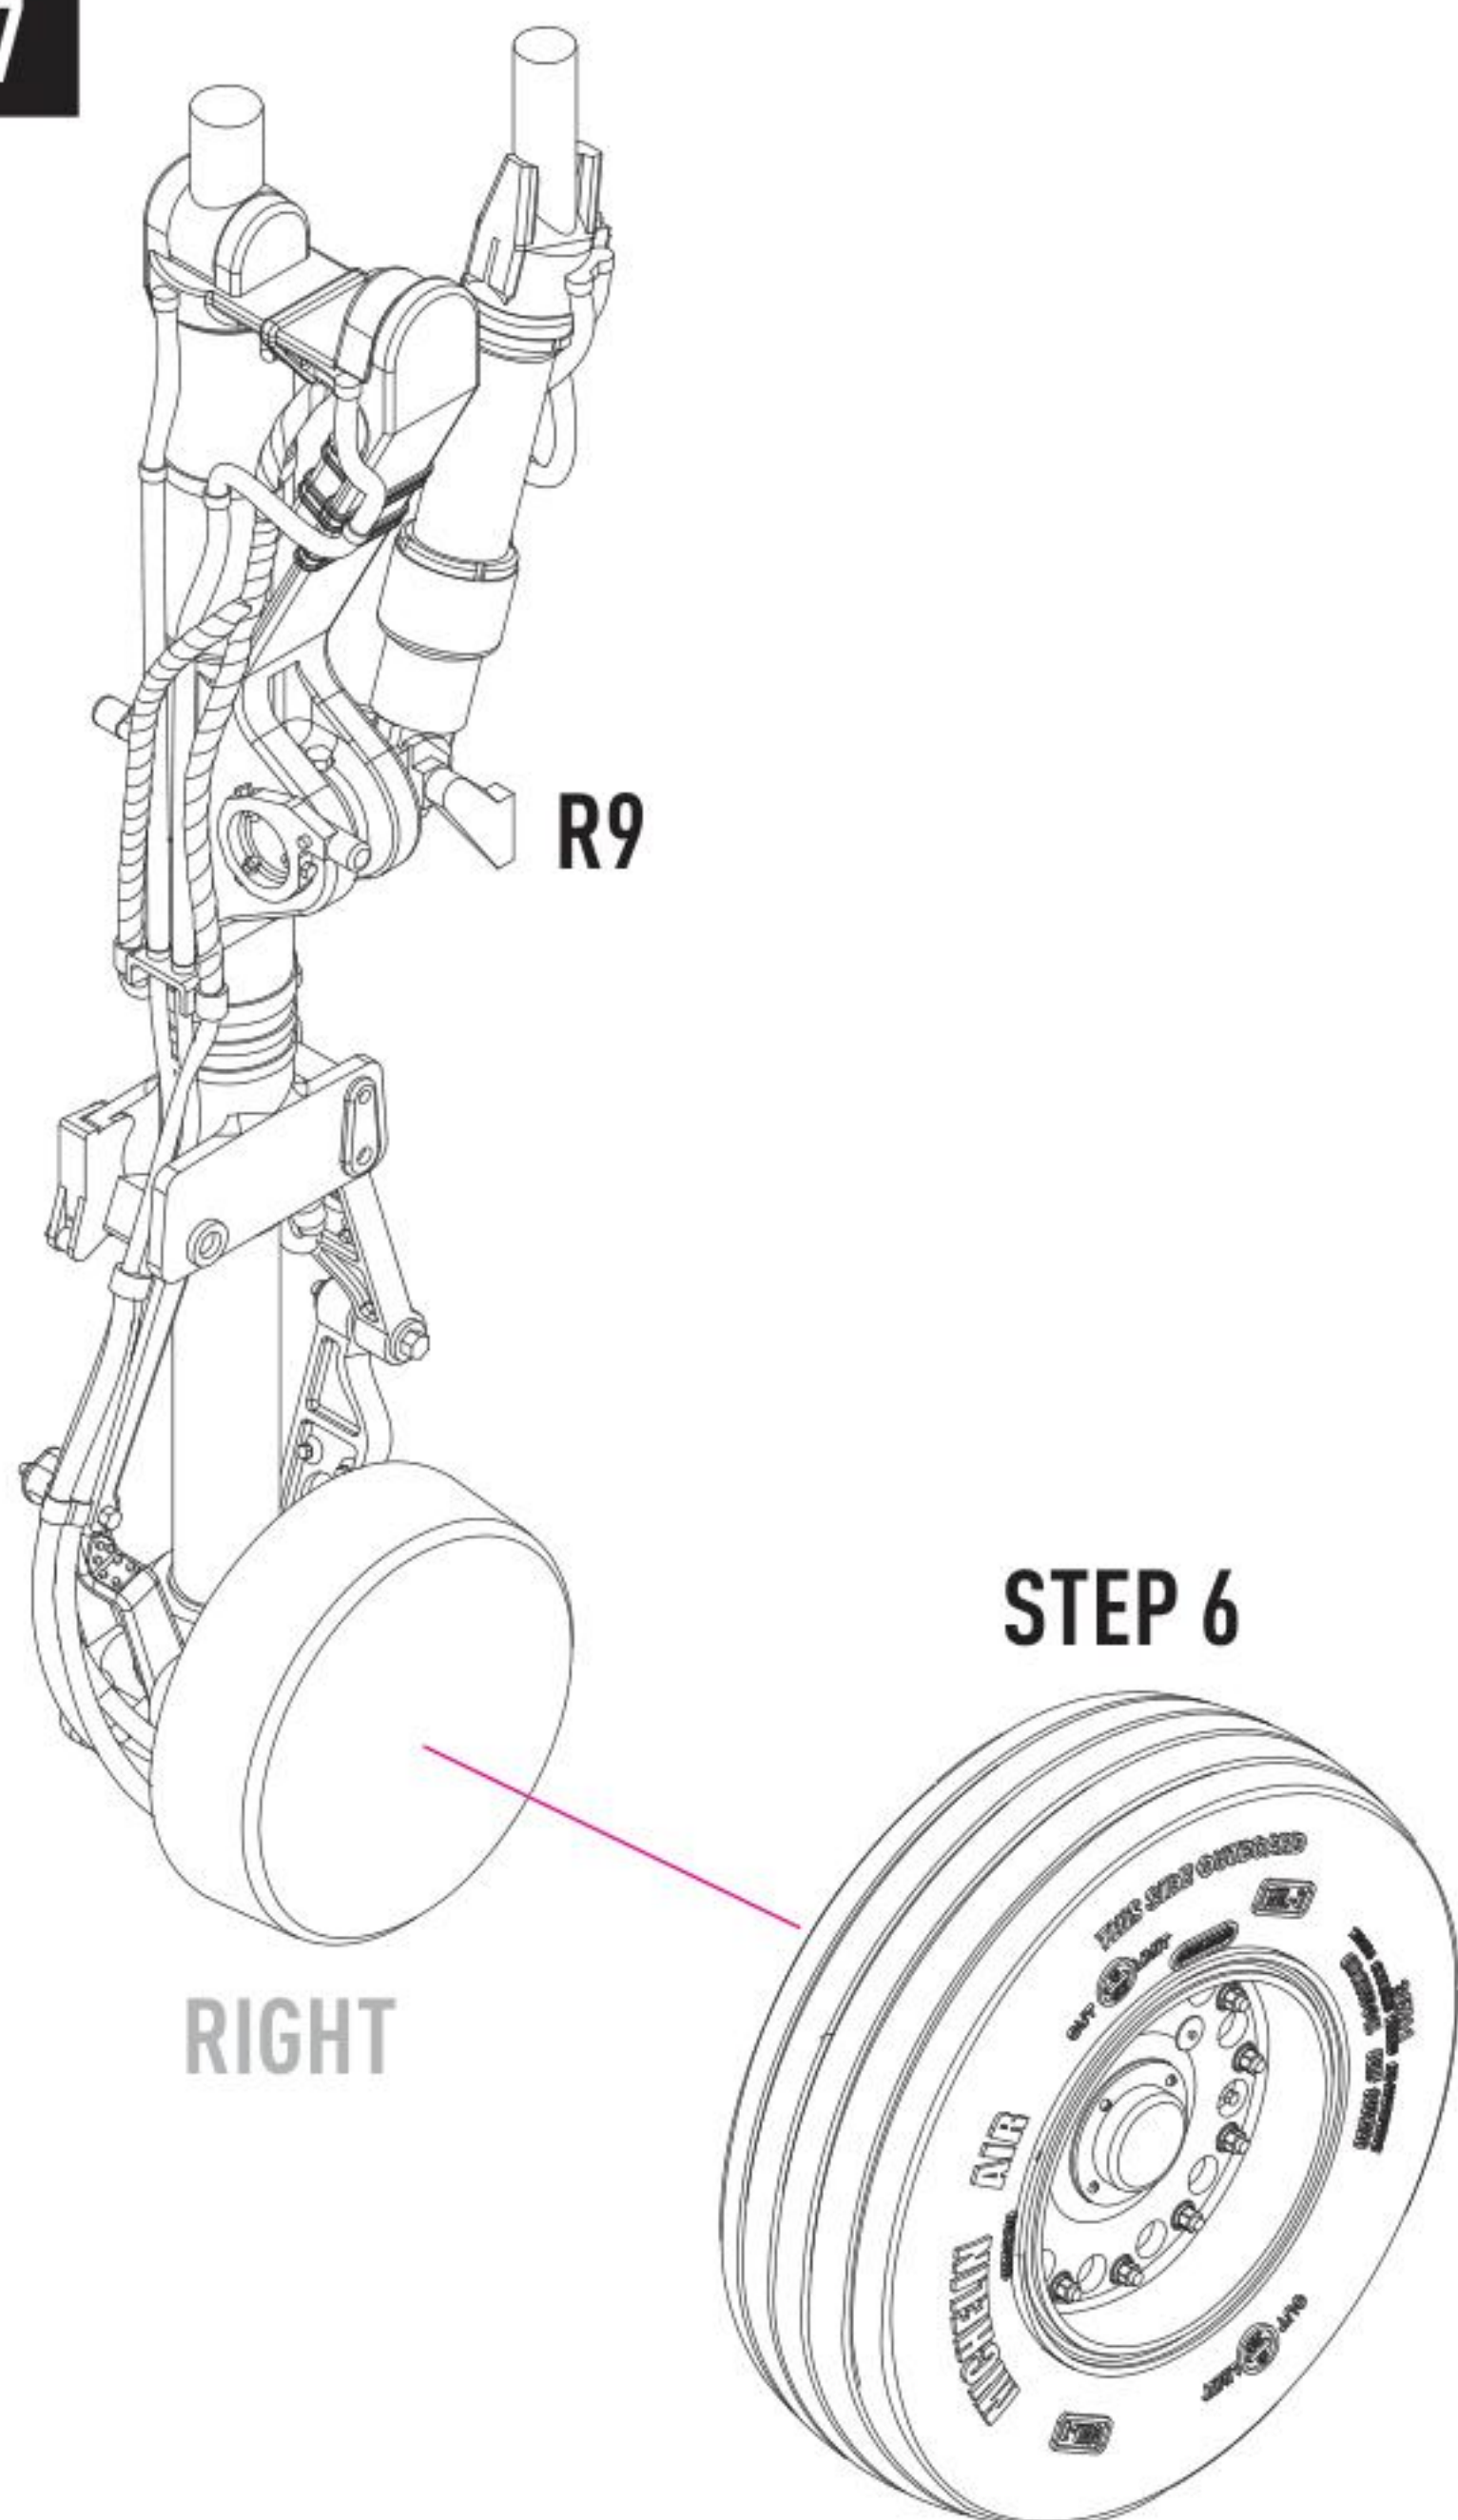

8

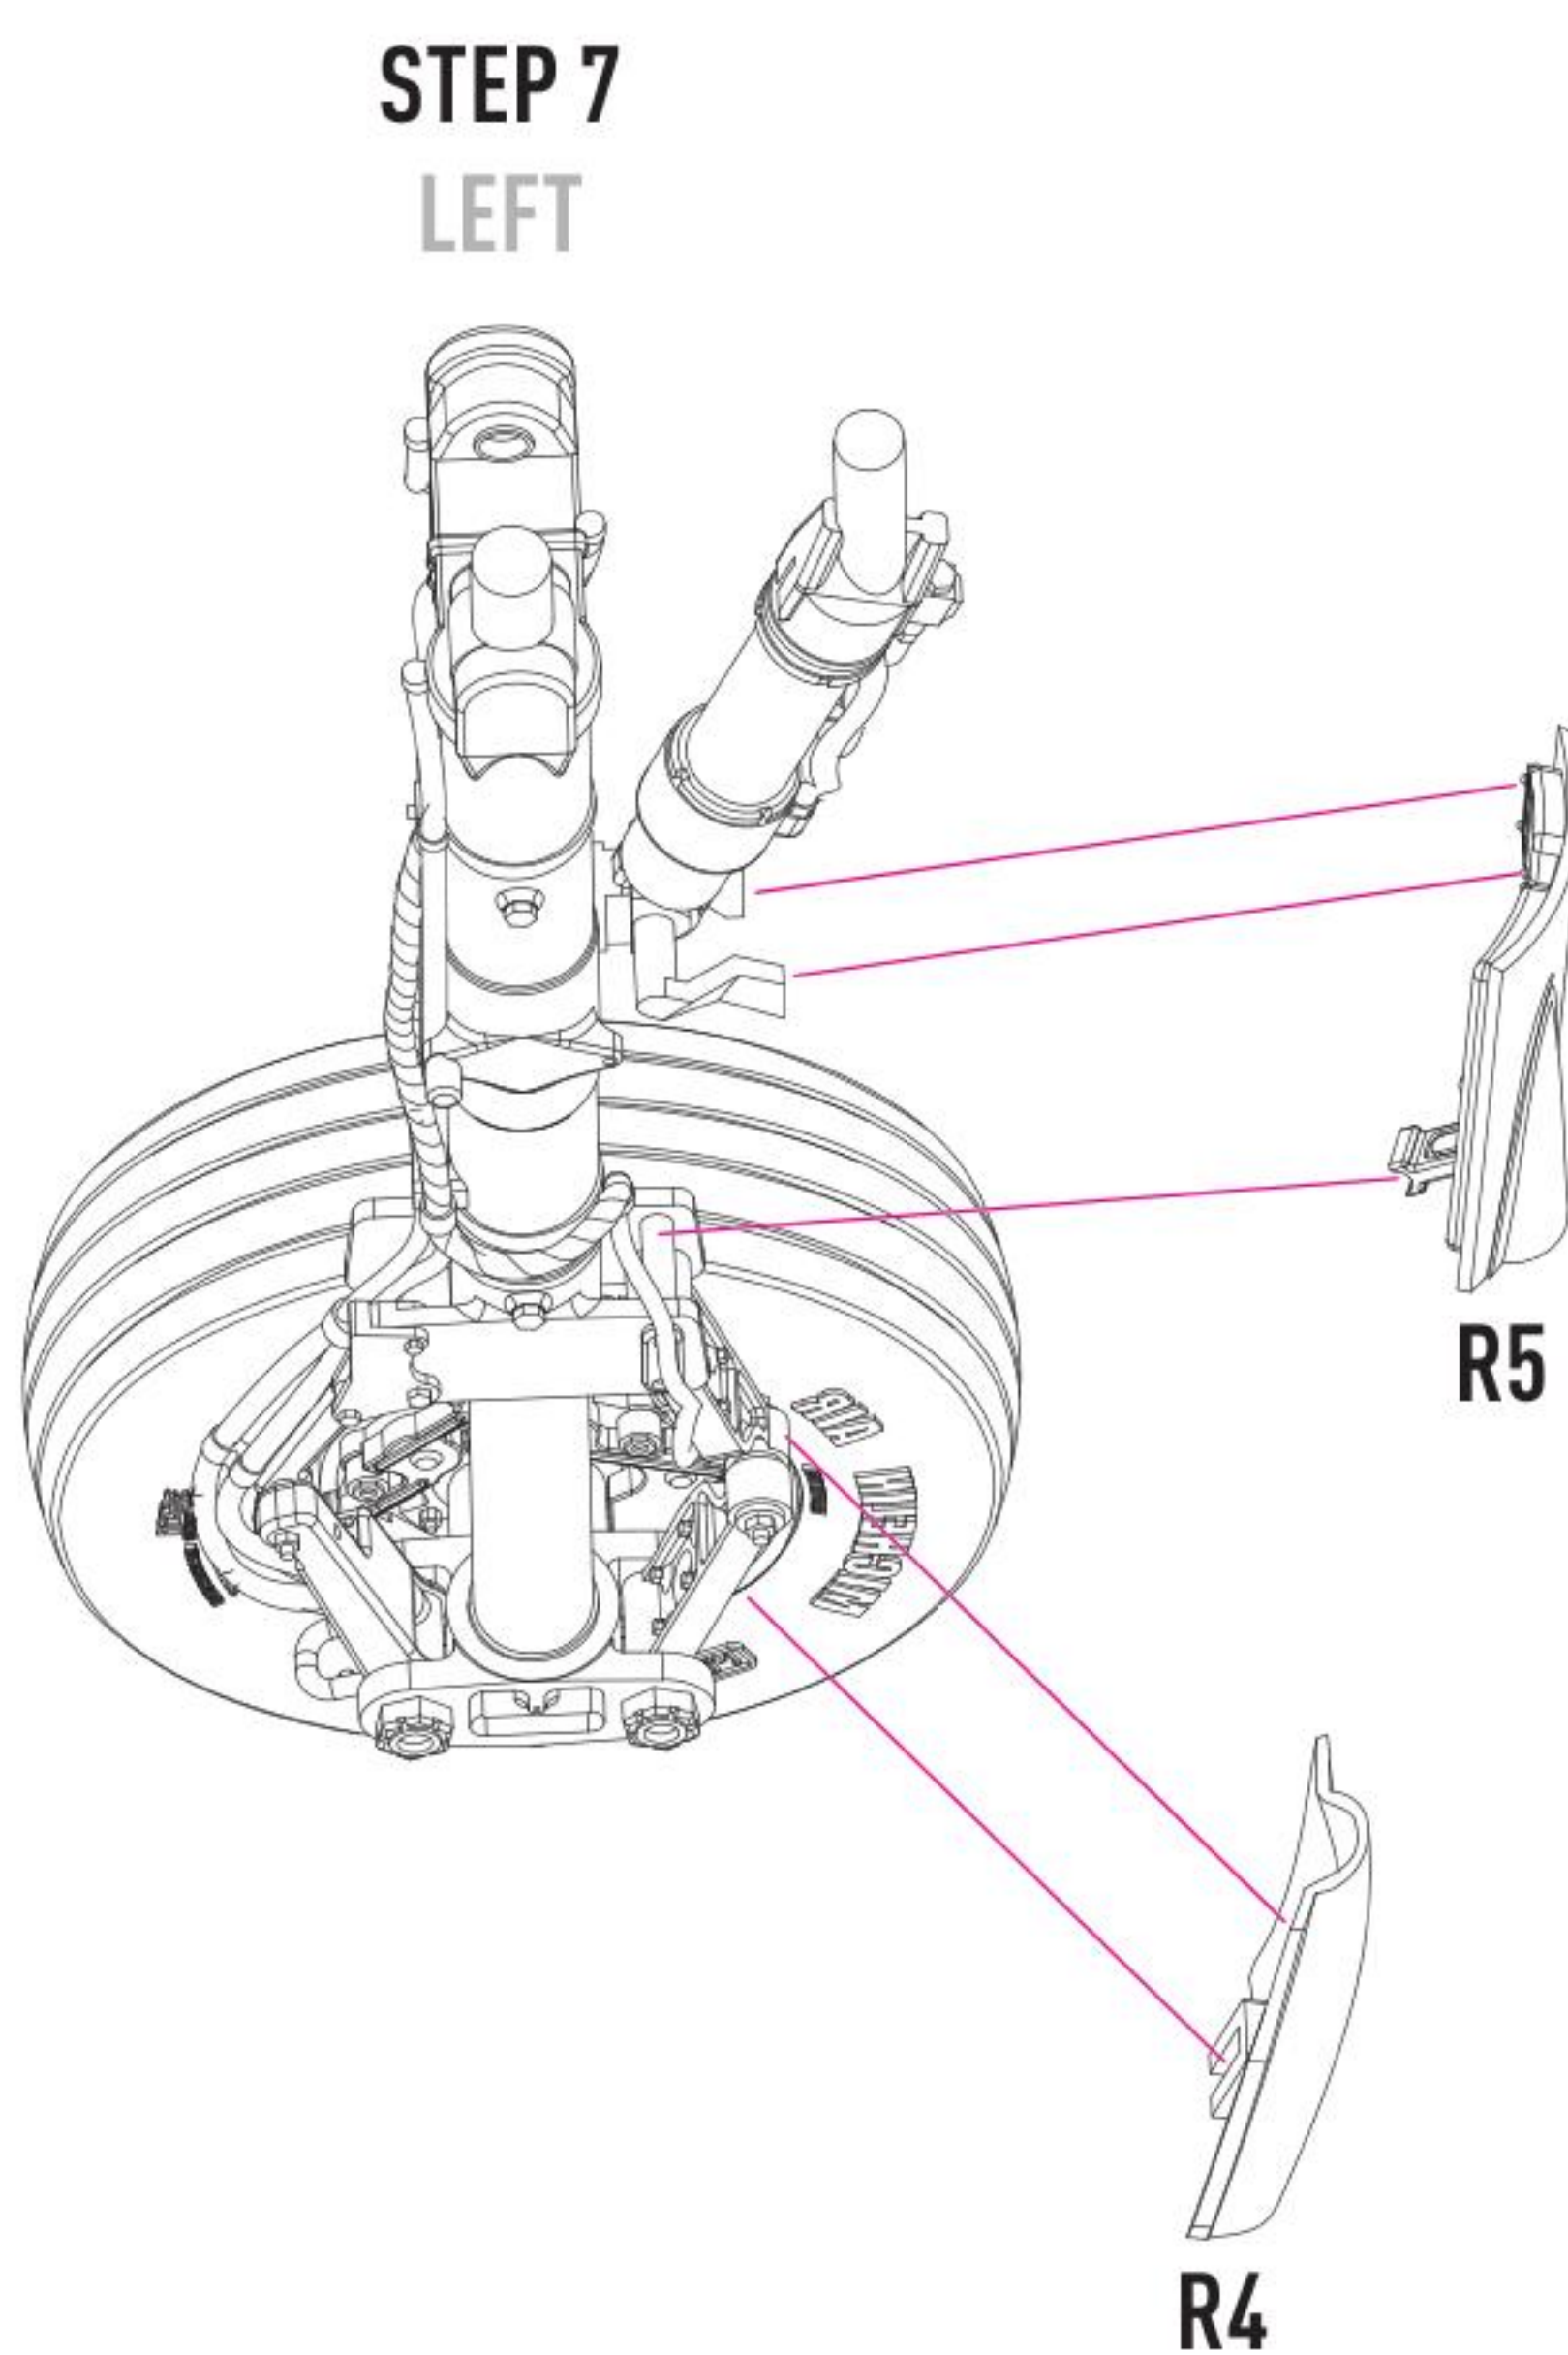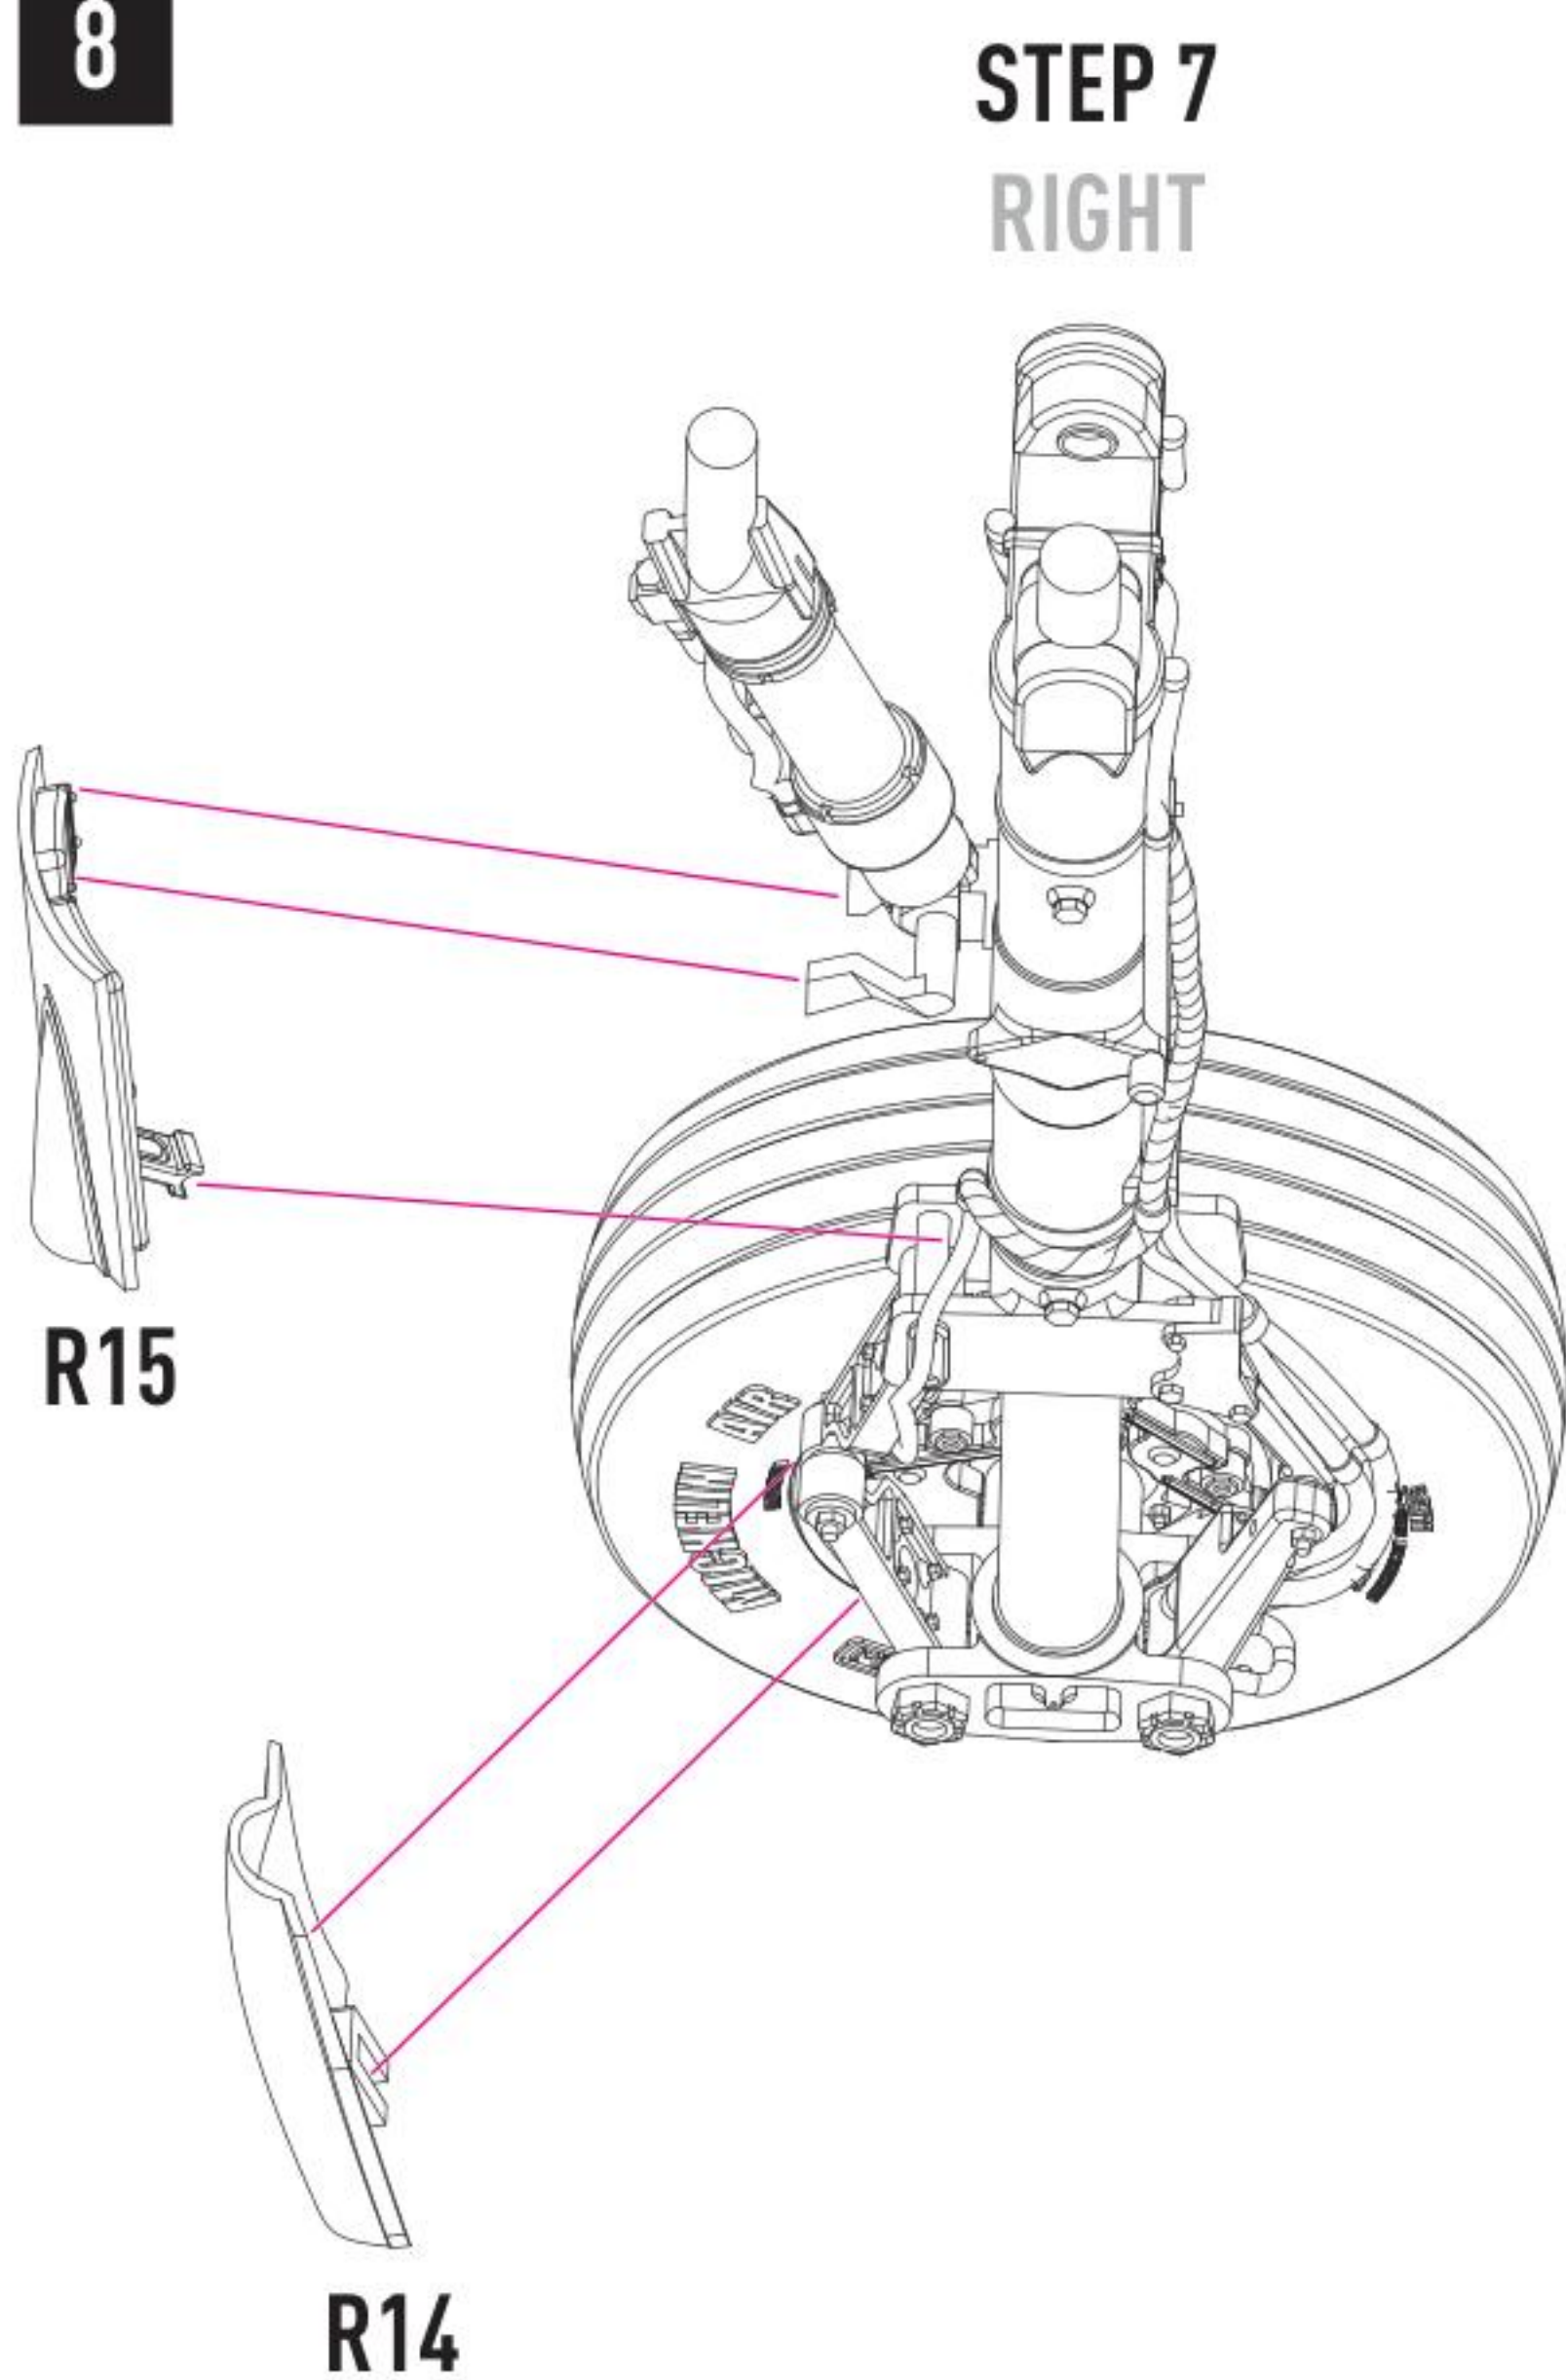


9

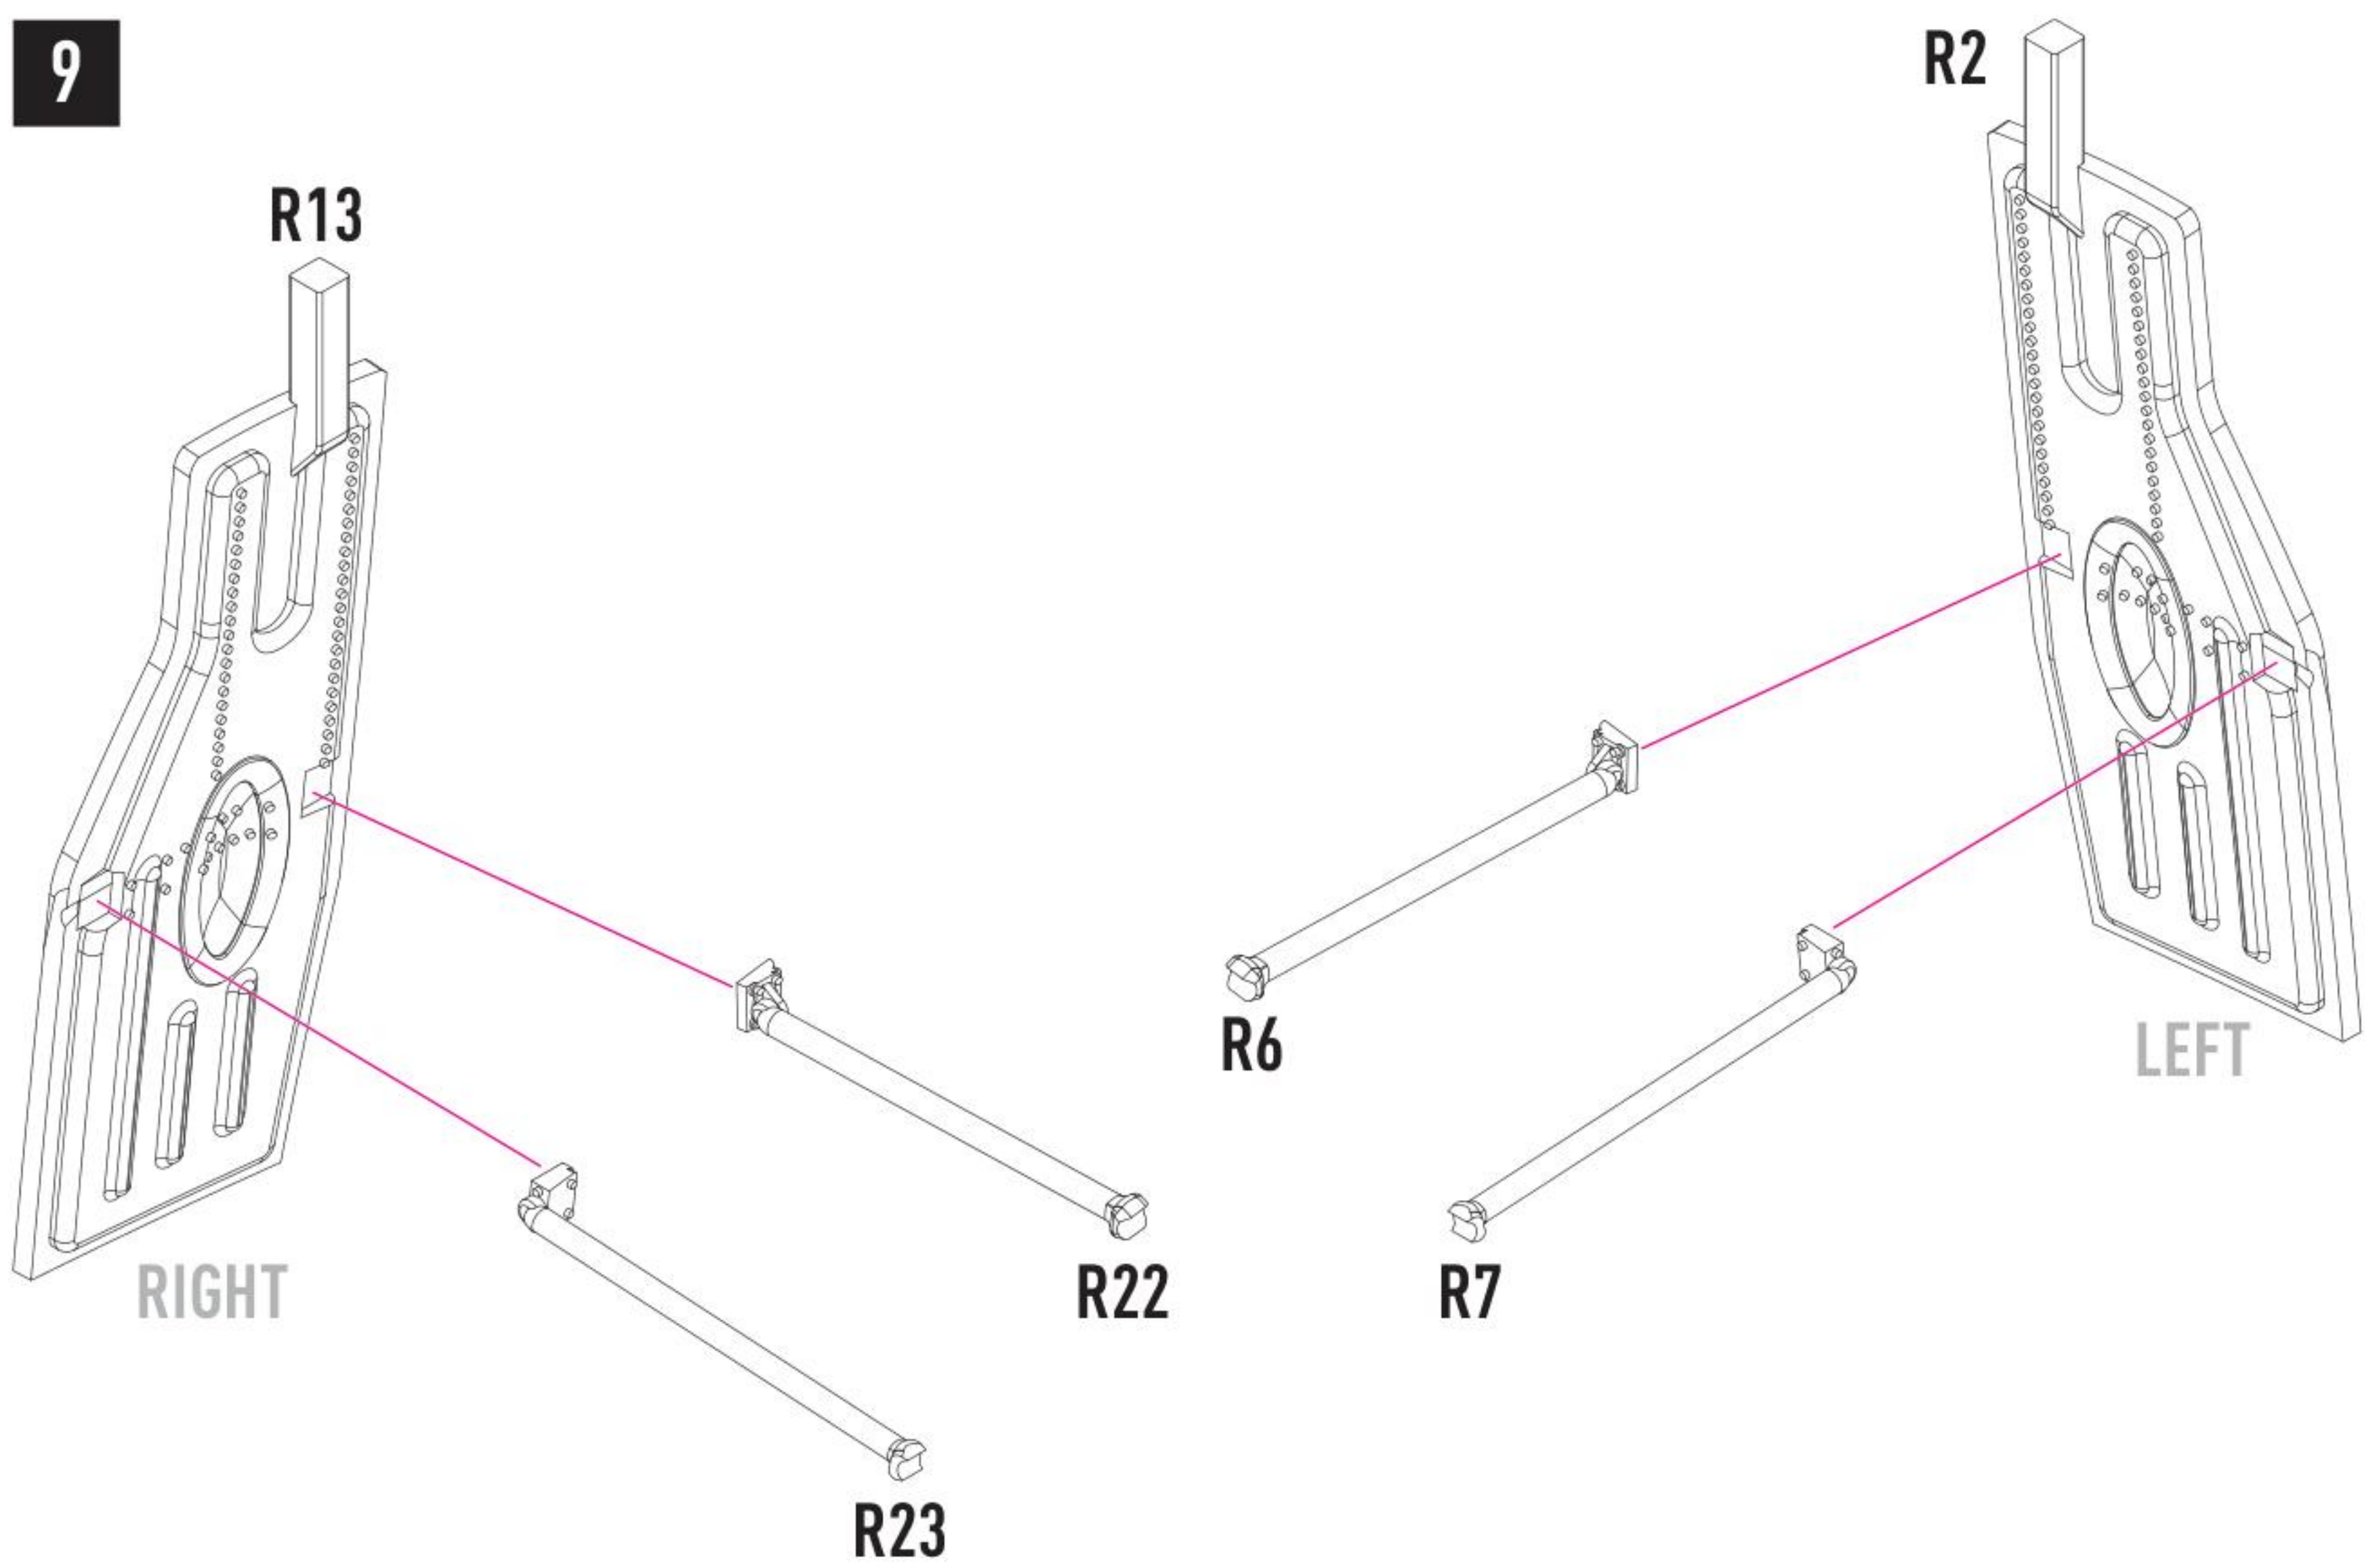

10 LEFT SIDE

GWH A-10 "THUNDERBOLT II" MODEL ASSEMBLY

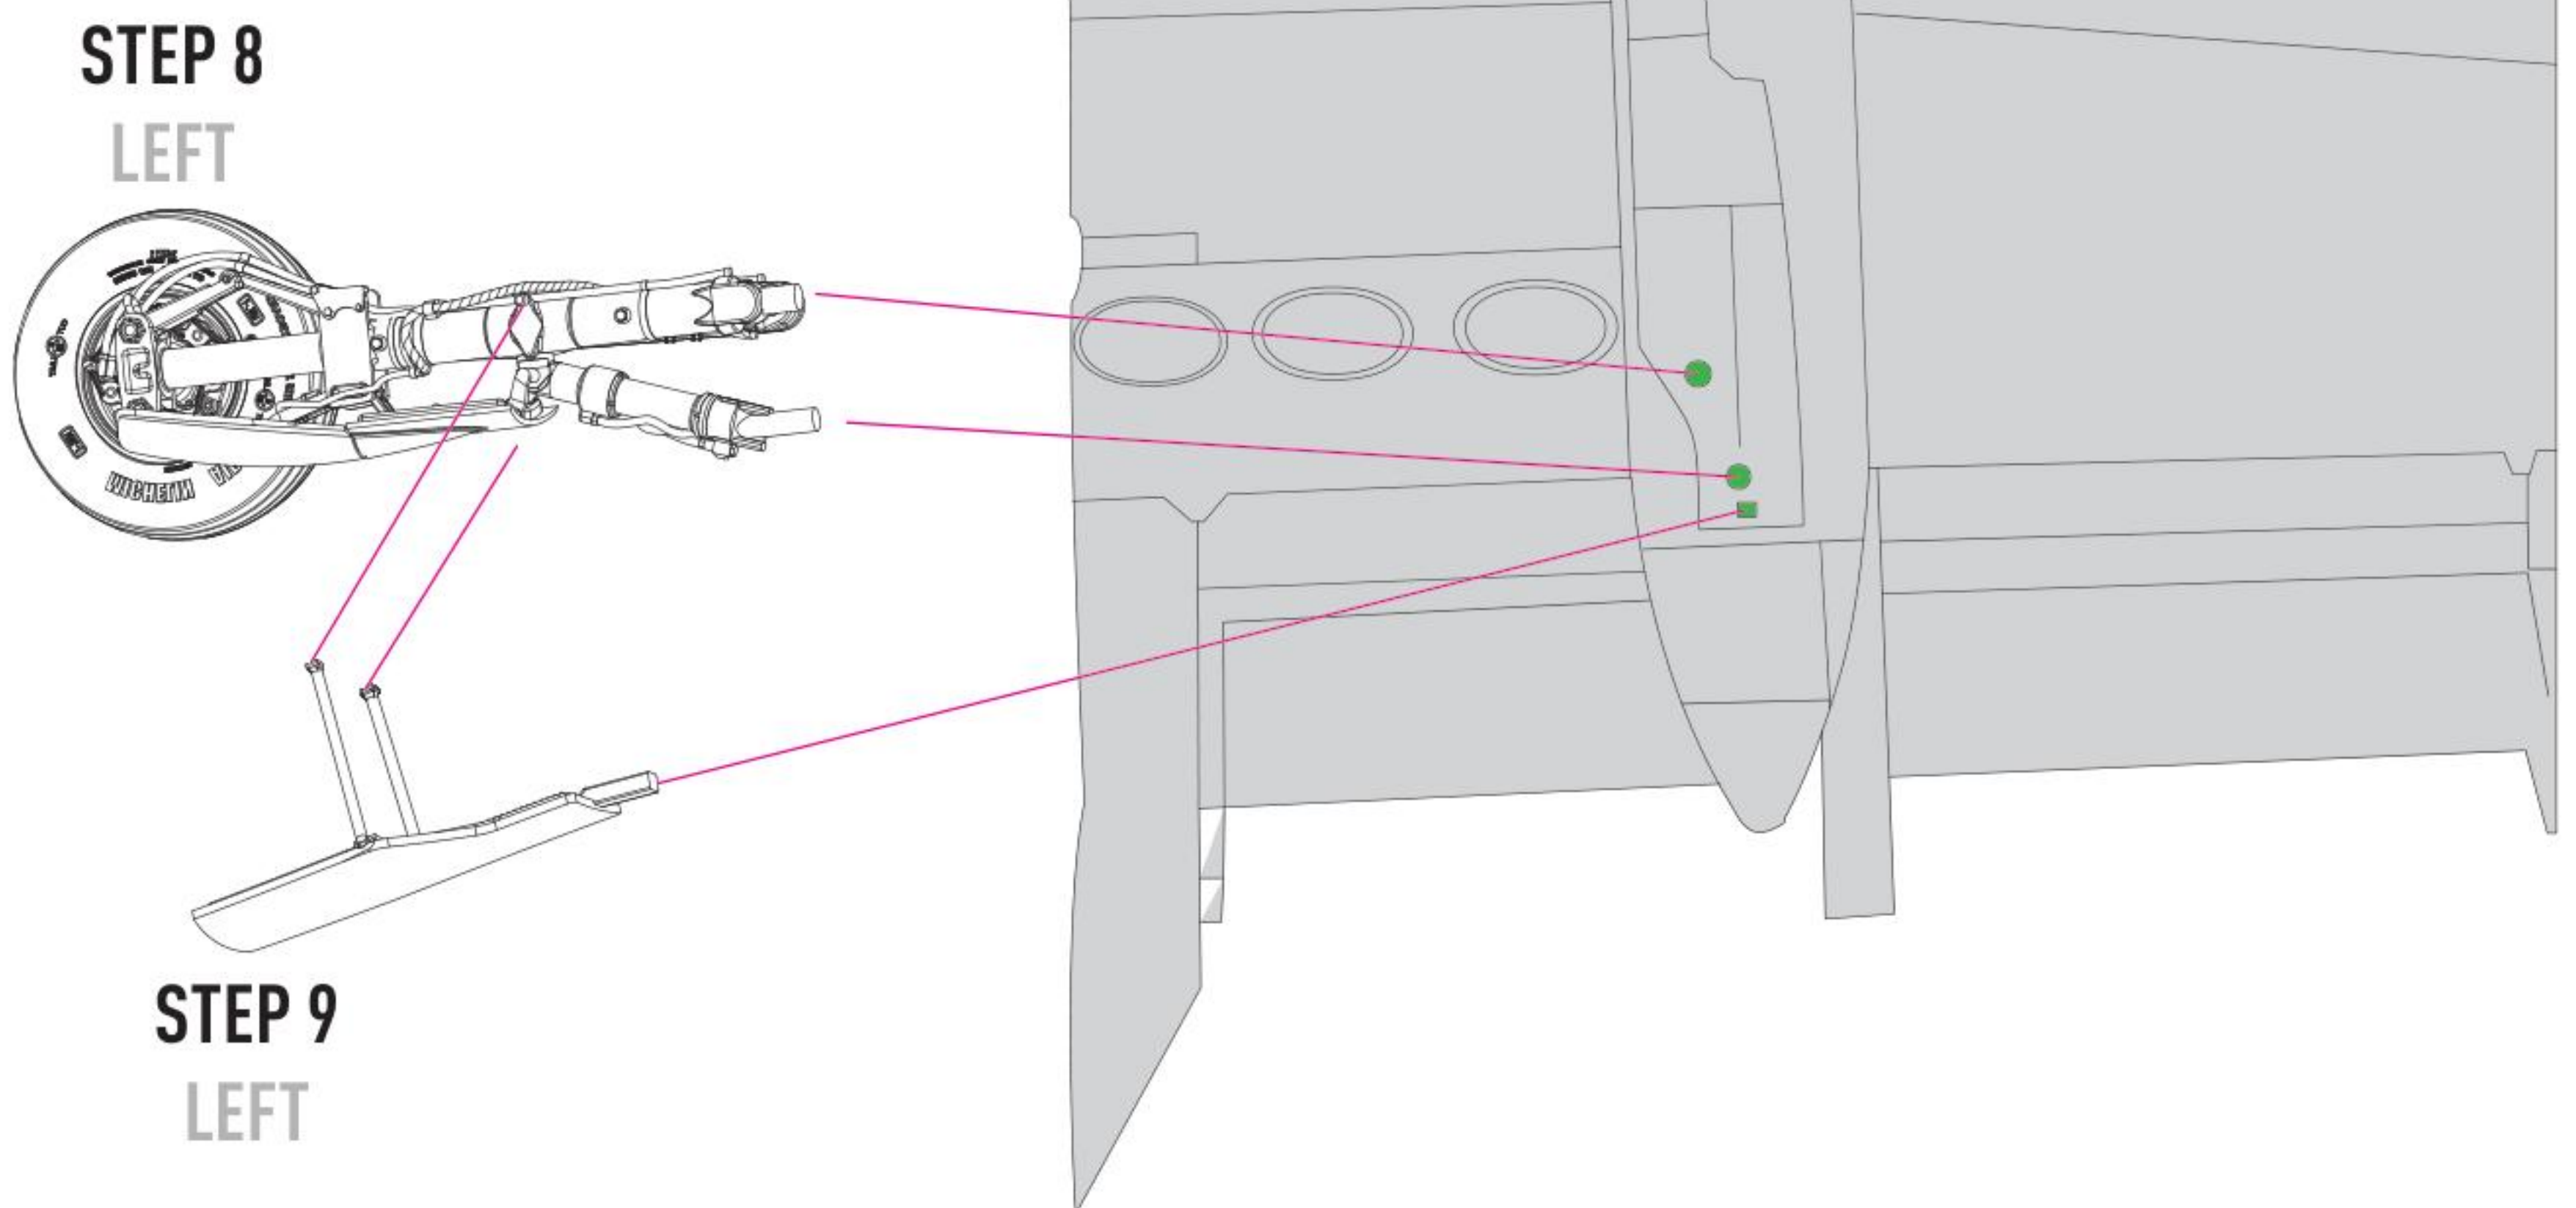

**FIRST GLUE STEP8 TO GWH MODEL ASSEMBLY
THAN GLUE STEP 9 TO MODEL AND CONNECT BOTH ADDITIONAL PART TOGETHER**

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua


RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)


[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)

**GWH A-10 "THUNDERBOLT II"
MODEL ASSEMBLY**

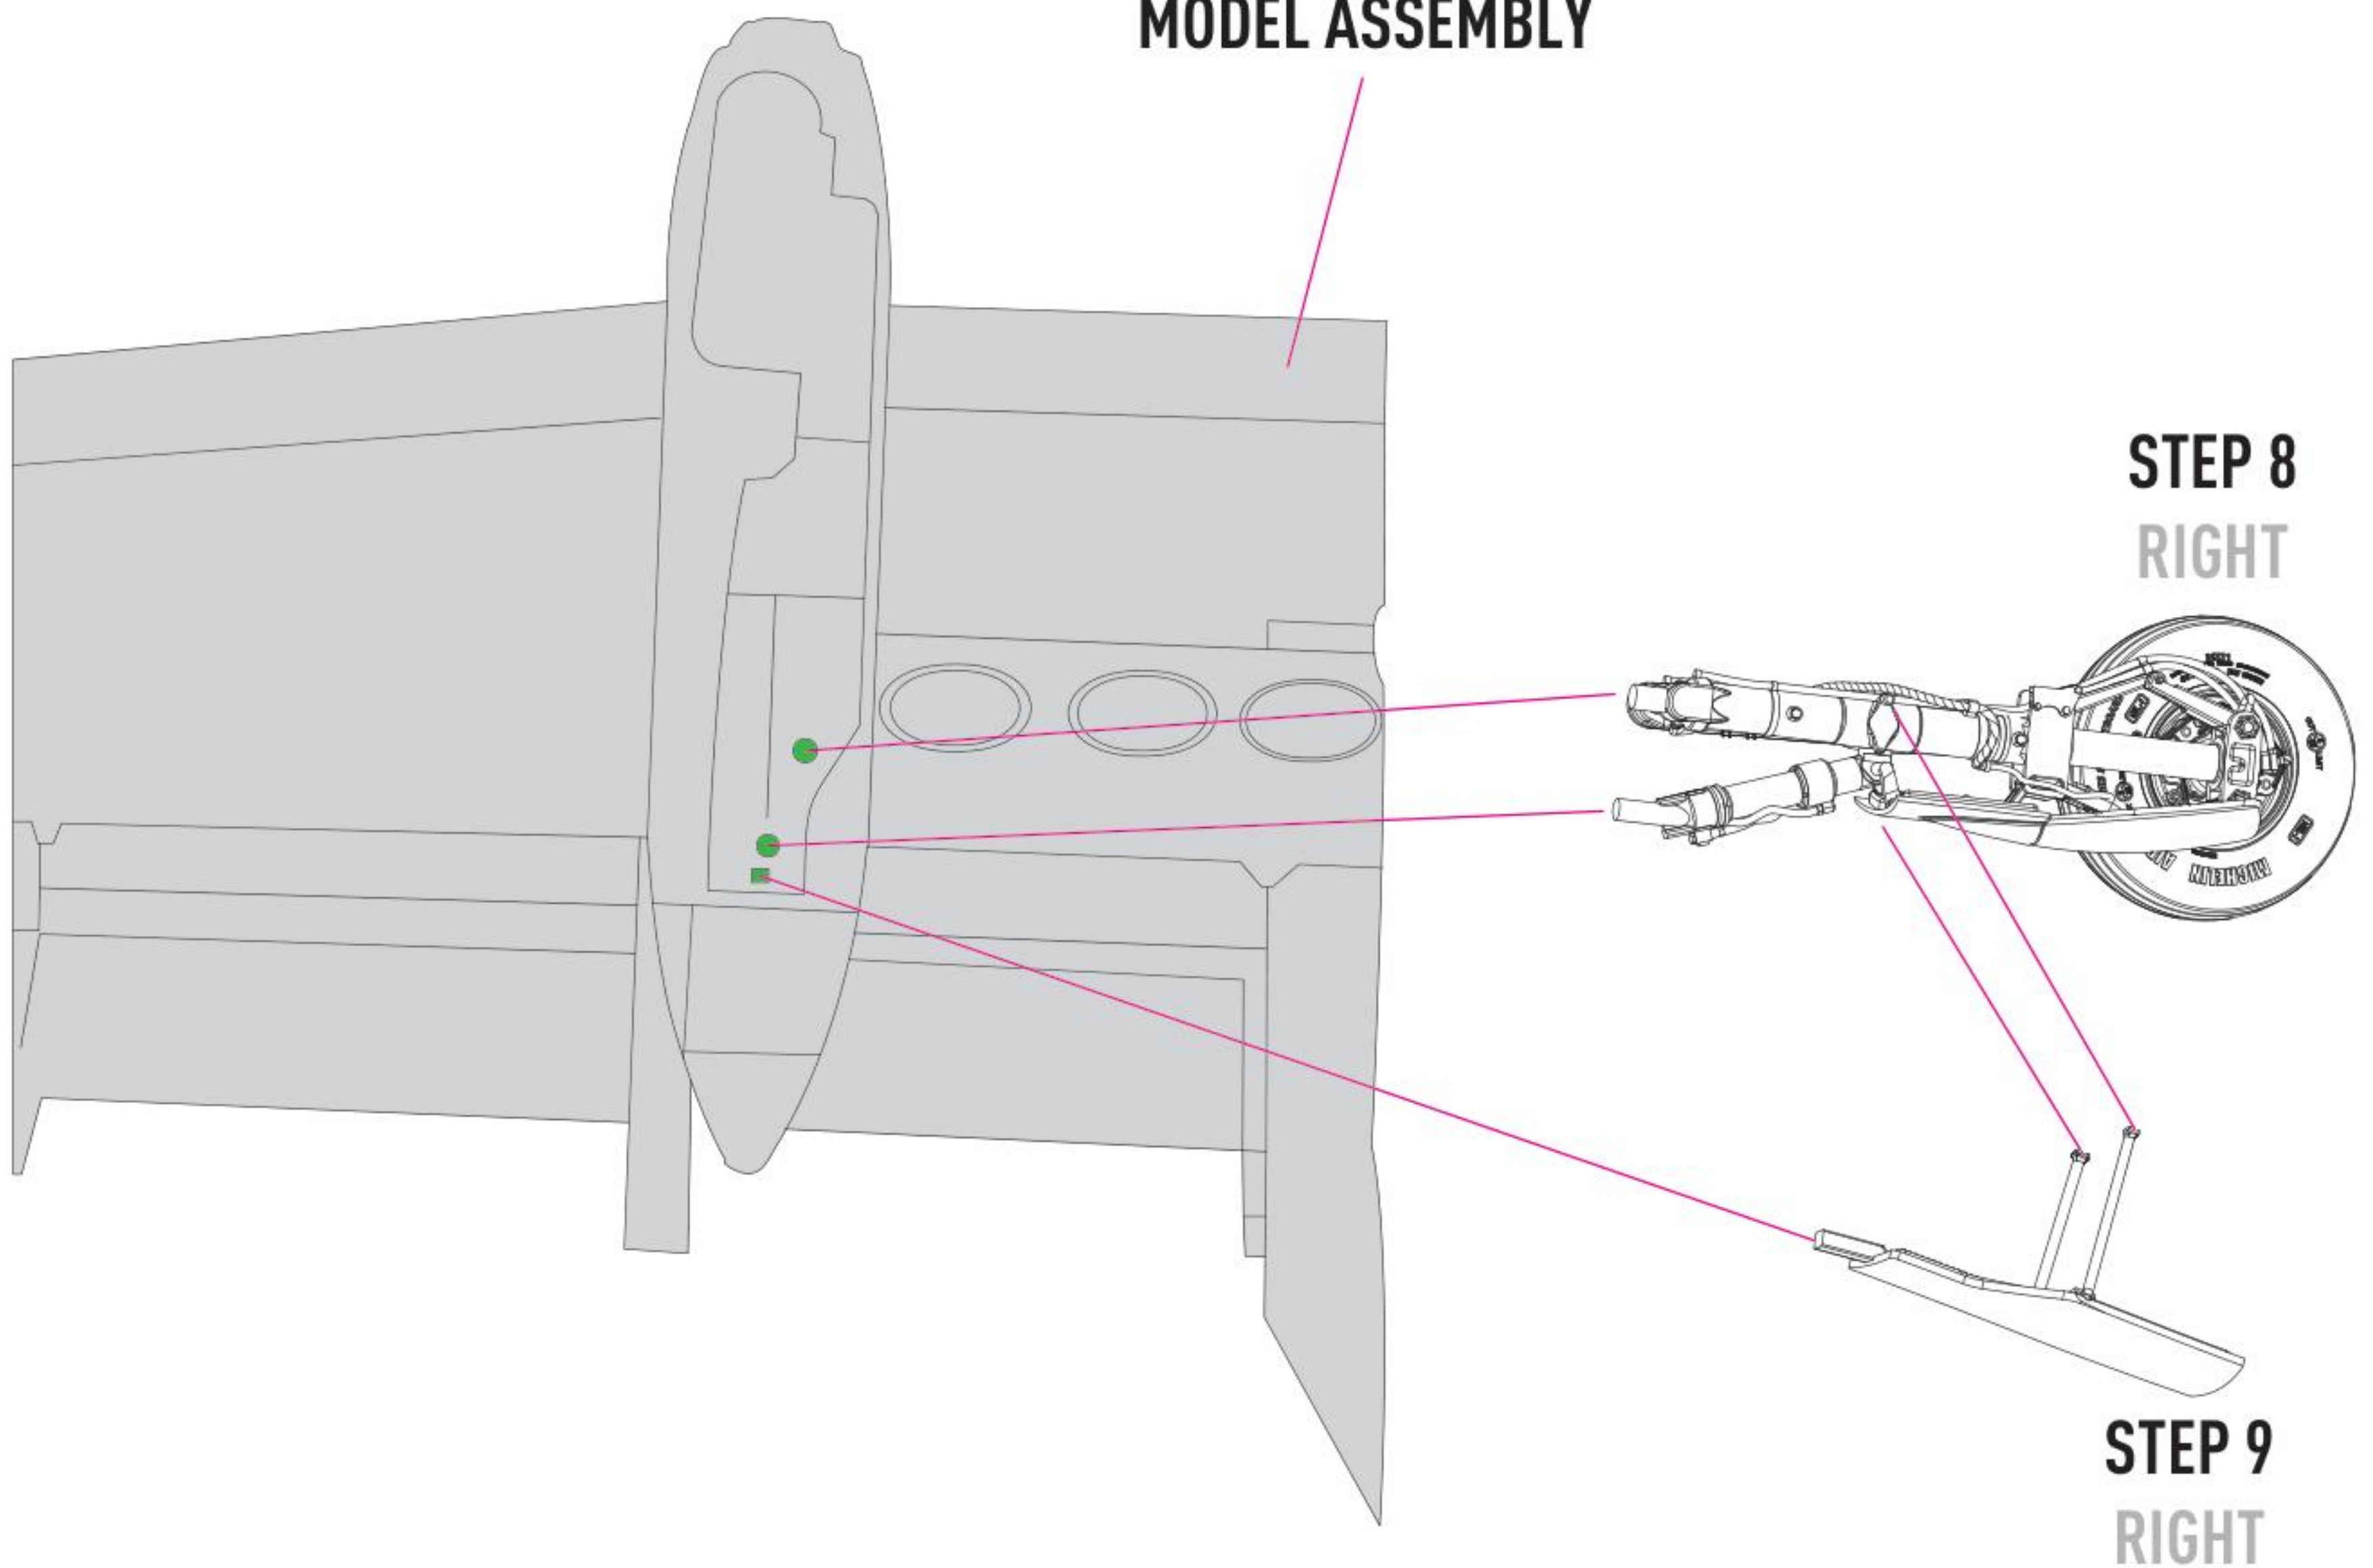

**FIRST GLUE STEP8 TO GWH MODEL ASSEMBLY
THAN GLUE STEP 9 TO MODEL AND CONNECT BOTH ADDITIONAL PART TOGETHER**

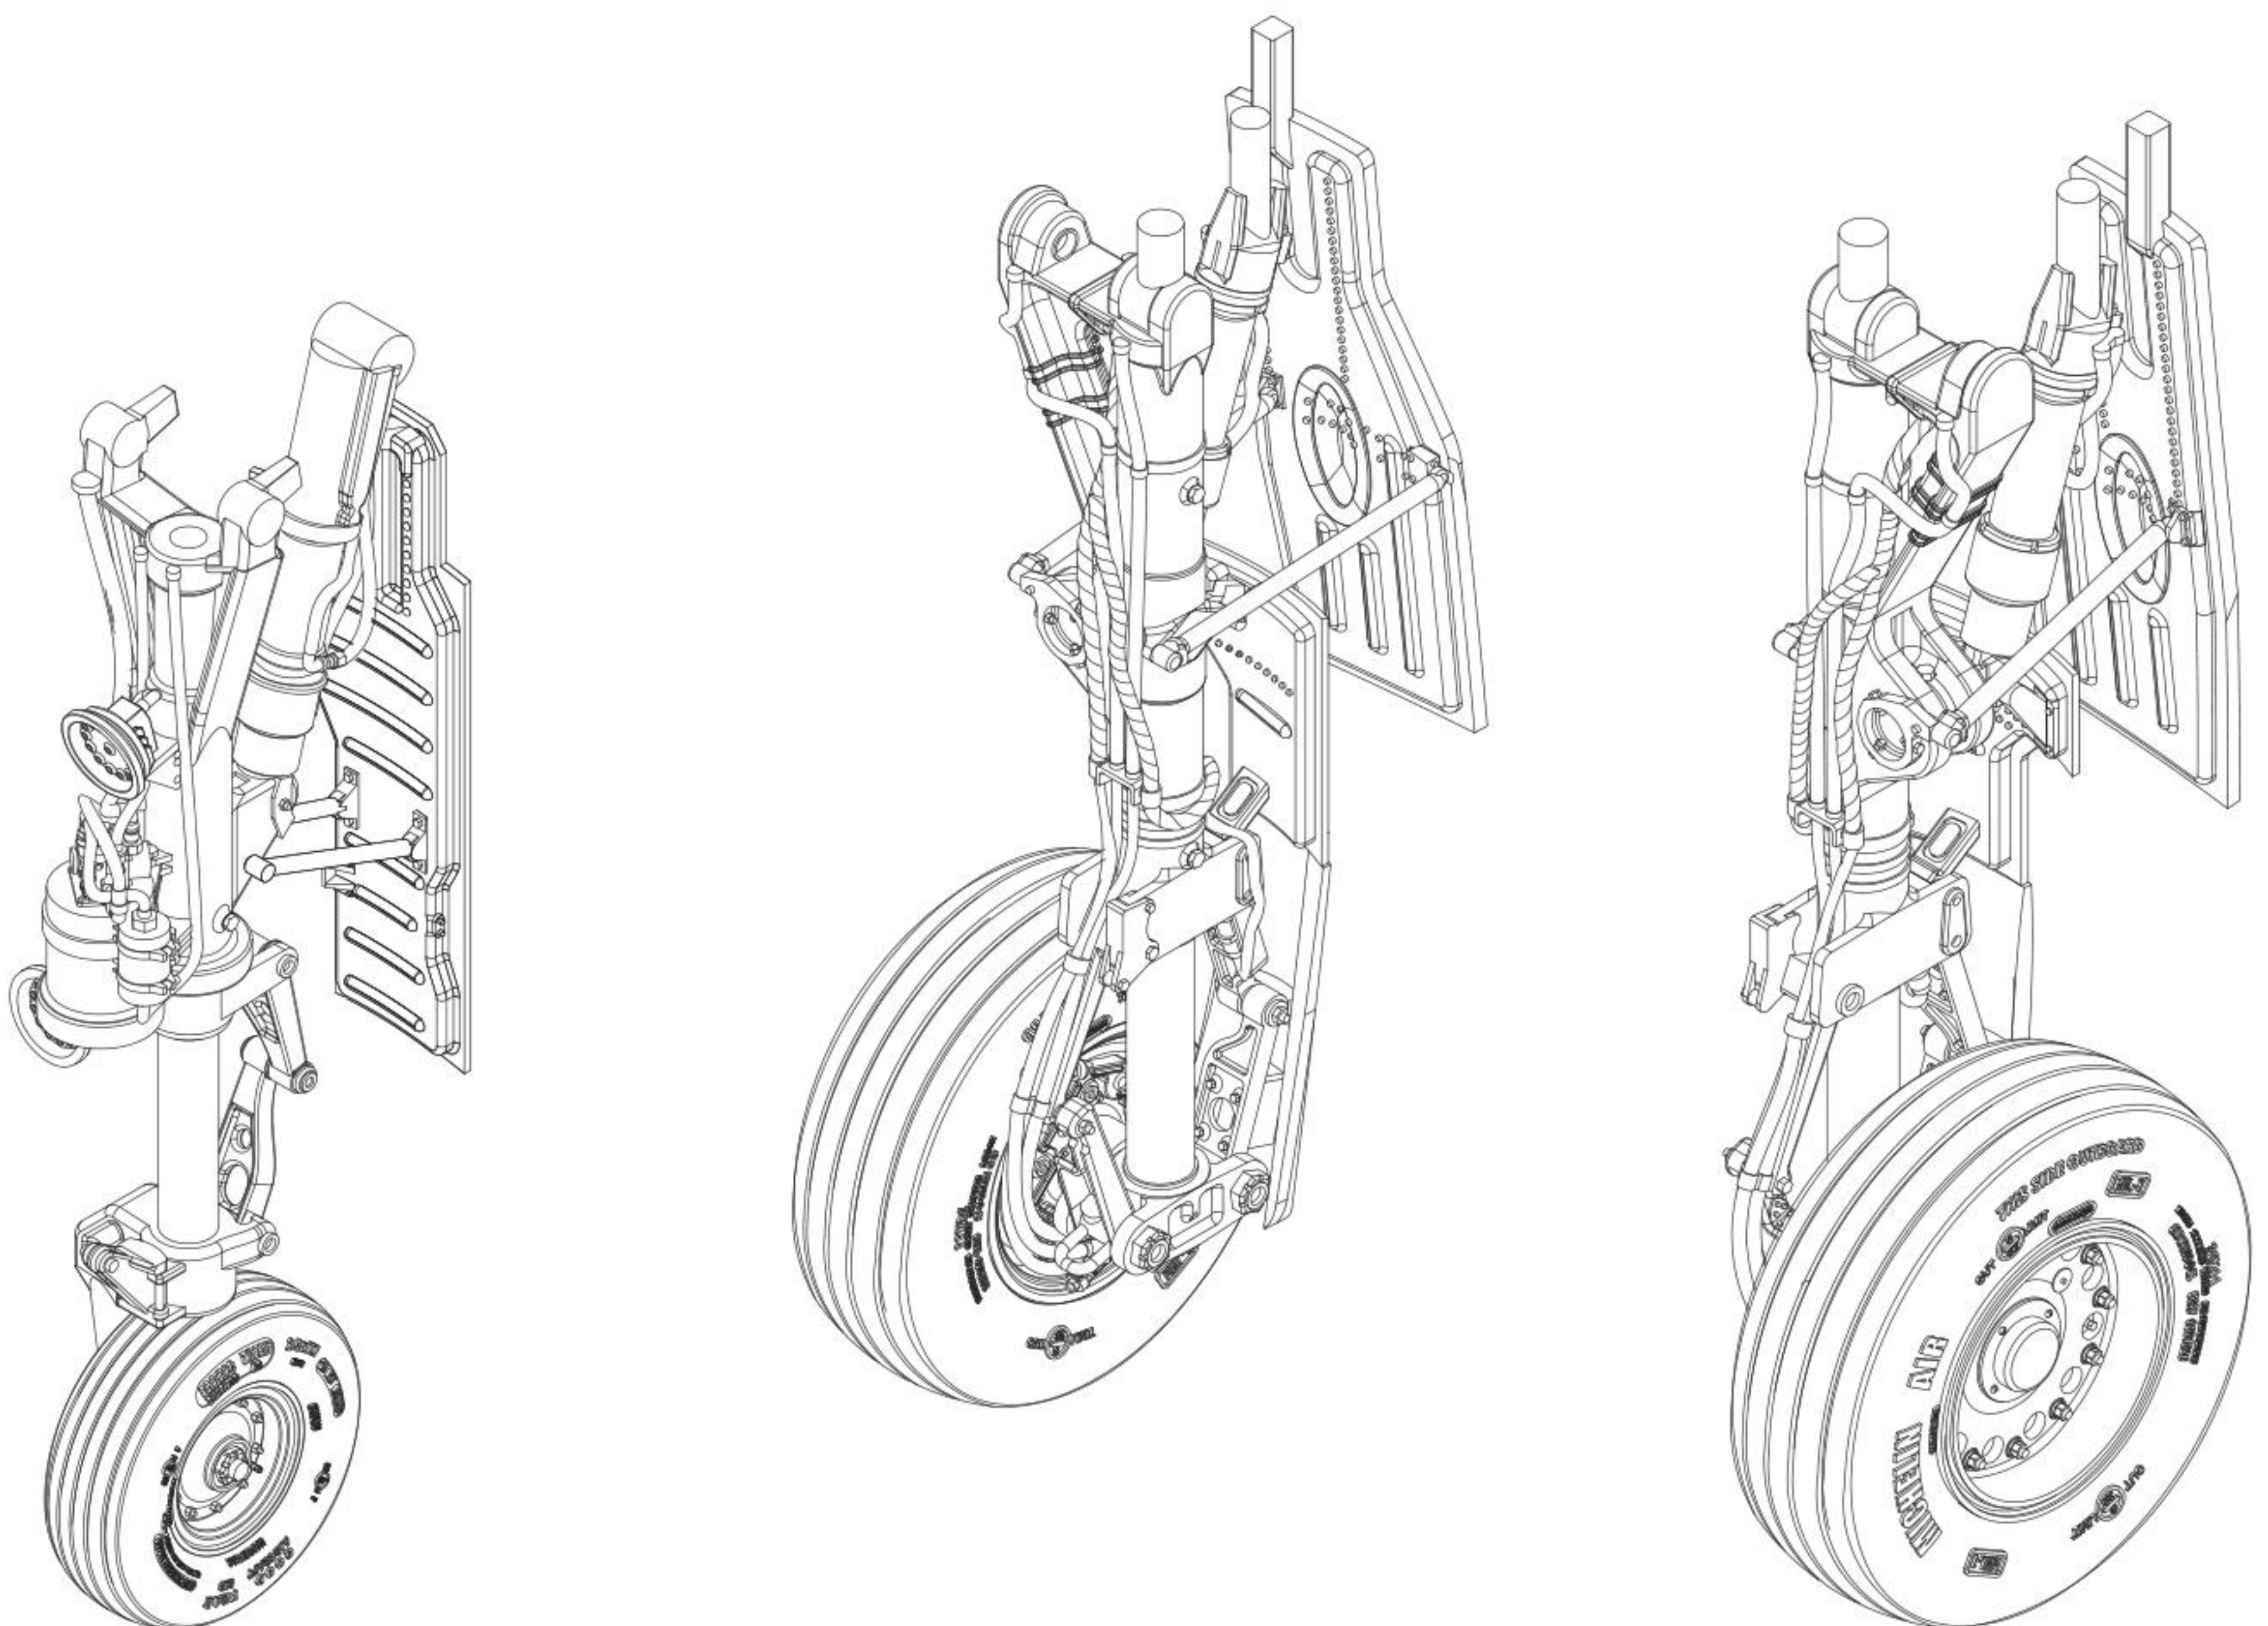

DECAL INSTRUCTION

