

ASSEMBLY INSTRUCTIONS — Yak-3

- Cement Seat and Control Column to Cockpit Floor and Pilot to Seat. (1-4)
- 2) Cement Propeller Shaft into Propeller. (5 and 6)
- 3) Cement Cockpit Assembly into Fuselage Half on lugs provided, then cement Fuselage Halves together trapping Propeller Assembly. (7 and 8)
- 4) Cement Lower Wing to Fuselage and Upper Wing Halves to Lower Wing. (9-11)
- Undercarriage Assembly Choice of extended or retracted.
 - a) Extended
 - (i) Cement or rivet one Mainwheel to each Leg Assembly. (20)

- (ii) Cement Leg to Door. (12 and 14) Repeat for Parts 13 and 15 and cement into Undercarriage Bays.
- (iii) Cement Inner Doors to Undercarriage Bays. (16 and 17)
- (iv) Cement Tailwheel Doors and Tailwheel to Rear Fuselage. (21 and 23)


b) Retracted

- (i) Cement Closed Mainwheel and Tailwheel Doors to Undercarriage Bays.(18, 19 and 22) Omit Parts 12-17, 20, 21 and 23.
- Cement Cockpit and Tailplanes to Fuselage. (24-26)

YAKOVLEV YAK 3

WWII RUSSIAN FIGHTER

RS103

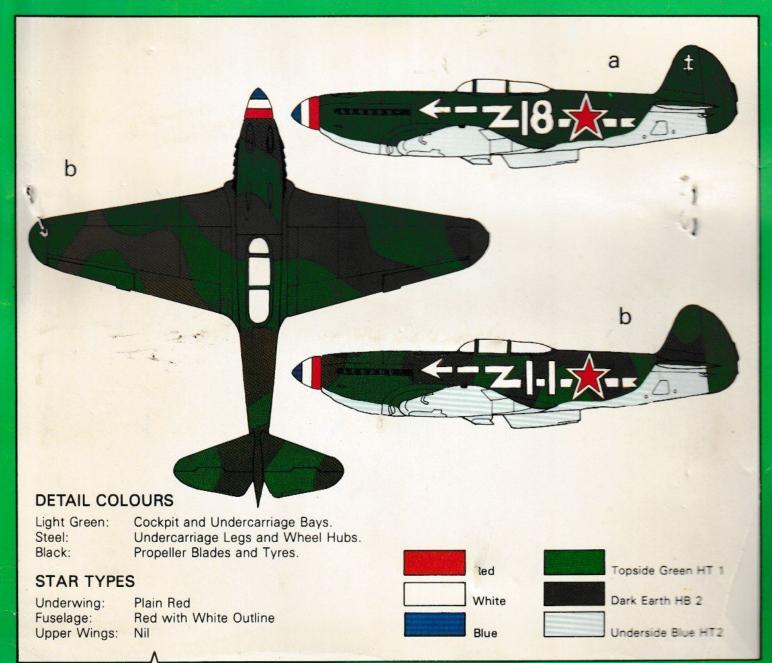

RED STAR
MODEL KITS LTD.
BECKENHAM KENT

DISTRIBUTED WORLDWIDE BY

CMS MARKETING INTERNATIONAL

42 ANERLEY HILL, SE19 2AE 01-776 7913